


# MM6D Remote controlled switching device

## Technical manual

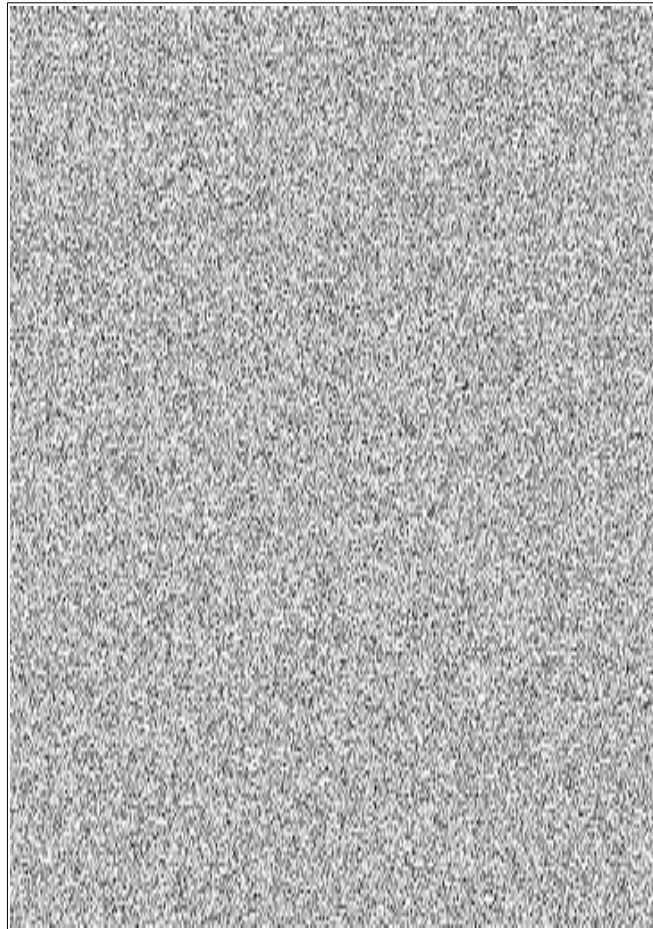

Hardware version: v200612

Software version: v0.1

Technical manual version: v1.0

Issue date: 2020.06.12.

Draw number: 59/11/1

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	1/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

# Content

I. Hardware.....	3
1. Technical data.....	4
2. General description.....	4
3. Schematic and PCB draws.....	4
4. Other draws and documents.....	4
5. Terms of use.....	4
6. Look of device.....	5
a) Manuals and connectors.....	5
b) Internal construction.....	6
c) Pinout of connectors.....	7
7. Downloadable documentation.....	8
II. Software.....	9
1. General description.....	10
2. Setup.....	10
3. Installation.....	10
4. Using the device.....	10
a) Data set and retrieval via HTTP.....	10
b) Connect to console via serial port.....	11
5. Check operation.....	12
6. Terms of use.....	14
7. Downloadable software package.....	14
III. Related links.....	15
1. Hardware and software.....	16
2. Terms of use.....	16
3. Developer and manufacturer.....	16
IV. Annexes.....	17
Content.....	18

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	2/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## I. Hardware

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	3/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## 1. Technical data

Supply voltage:	230V AC	IP protection:	IP 20
Auxiliary voltage:	12V DC	Mass of cover:	termoplast (ABS)
Supply current:	max. ?A	Communication:	Wireless LAN, TTL 3.3V serial port
Isolation class:	Class I	Get/set data:	via HTTP
Mechanical size:	71 x 71 x 27 mm	Administration:	via serial connection

## 2. General description

The device has four 12V DC inputs separated by an optocoupler and four relay outputs. These have a predefined function. Their status can be queried or set via HTTP. The power outputs can also be switched manually. The continuous operation of the microcontroller is ensured by a 3.7V 500mAh LiPoly battery, the alarm sensor is provided by a non-rechargeable 6F22 9V battery.

### Load capacity of outputs:

Function	Voltage	Maximal current	Overcurrent protection	Watched?
Status lamp outputs	12V DC	0.5A	fuse	no
Lamp output	230V AC	2 A	overcurrent breaker	yes
Ventilator output	230V AC	2 A		yes
Heater output	230V AC	10 A		yes

## 3. Schematic and PCB draws

The wiring diagrams of the device is shown in Annex 1, PCB draws are in Annex 2-4. You can download it as part of the complete documentation or in separate PDF, SVG and KiCAD formats from the developer/manufacturer's website. The Gerber files needed for production are included in the package.

## 4. Other draws and documents

Documentation package contents drilling draws in PDF and DXF format.

## 5. Terms of use

Hardware documentation can be modified and/or redistributed under the Creative Commons 4.0 Attribution Non-Commercial (CC-BY-NC-4.0) License. You can read the full text of the license online. (Refer to Chapter III for references.)

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	4/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## 6. Look of device

### a) Manuals and connectors

1. Mains voltage signal light (white LED)
2. Auxiliary voltage signal light (white LED)
3. Activity signal light (blue LED)
4. Manual mode signal light (yellow LED)
5. General error signal light (red LED)
6. Protection error signal light (red LED)
7. Lamp on signal light (green LED)
8. Ventilator on signal light (green LED)
9. Heater on signal light (green LED)
10. Mains connectors (P1-3)
11. Console connector (P4)
12. Alarm sensor connectors (P5-6)
13. Status lamp connectors (P7-9)
14. Lamp connectors (P10-12)
15. Ventilator connectors (P13-15)
16. Heater connectors (P16-18)
17. Lamp manual mode switch (SW1)
18. Ventilator manual mode switch (SW2)
19. Heater manual mode switch (SW3)
20. Operation mode switch (SW4)

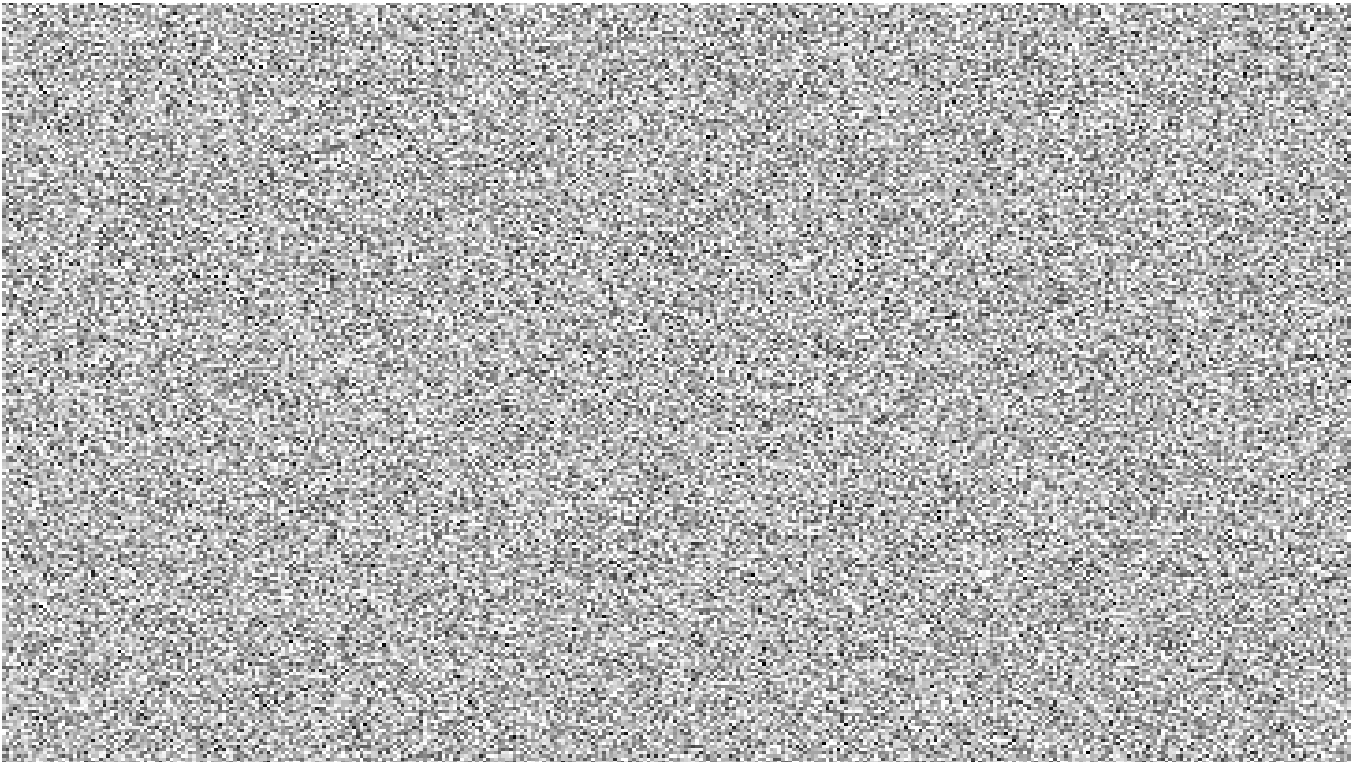


Figure 1: Manuals and connectors

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	5/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## b) Internal construction

1. Board of microcontroller
2. Battery of microcontroller (BT1)
3. Battery of alarm input (BT2)
4. Auxiliary power supply
5. Board power supply
6. Fuse of alarm sensor (F2)
7. Fuse of power supply (F1)
8. Fuse of auxiliary voltage (F2)
9. Fuse of external status lamps (F3)
10. Relay of external status lamp (K1)
11. Relay of lamp output (K2)
12. Relay of ventilator output (K3)
13. Relay of heater output (K4)
14. Breaker of lamp output (F6)
15. Breaker of ventilator output (F7)
16. Breaker of heater output (F8)
17. Mains connectors (P1-3)
18. Console connector (P4)
19. Alarm sensor connectors (P5-6)
20. Status lamp connectors (P7-9)
21. Lamp connectors (P10-12)
22. Ventilator connectors (P13-15)
23. Heater connectors (P16-18)
24. Mounting holes

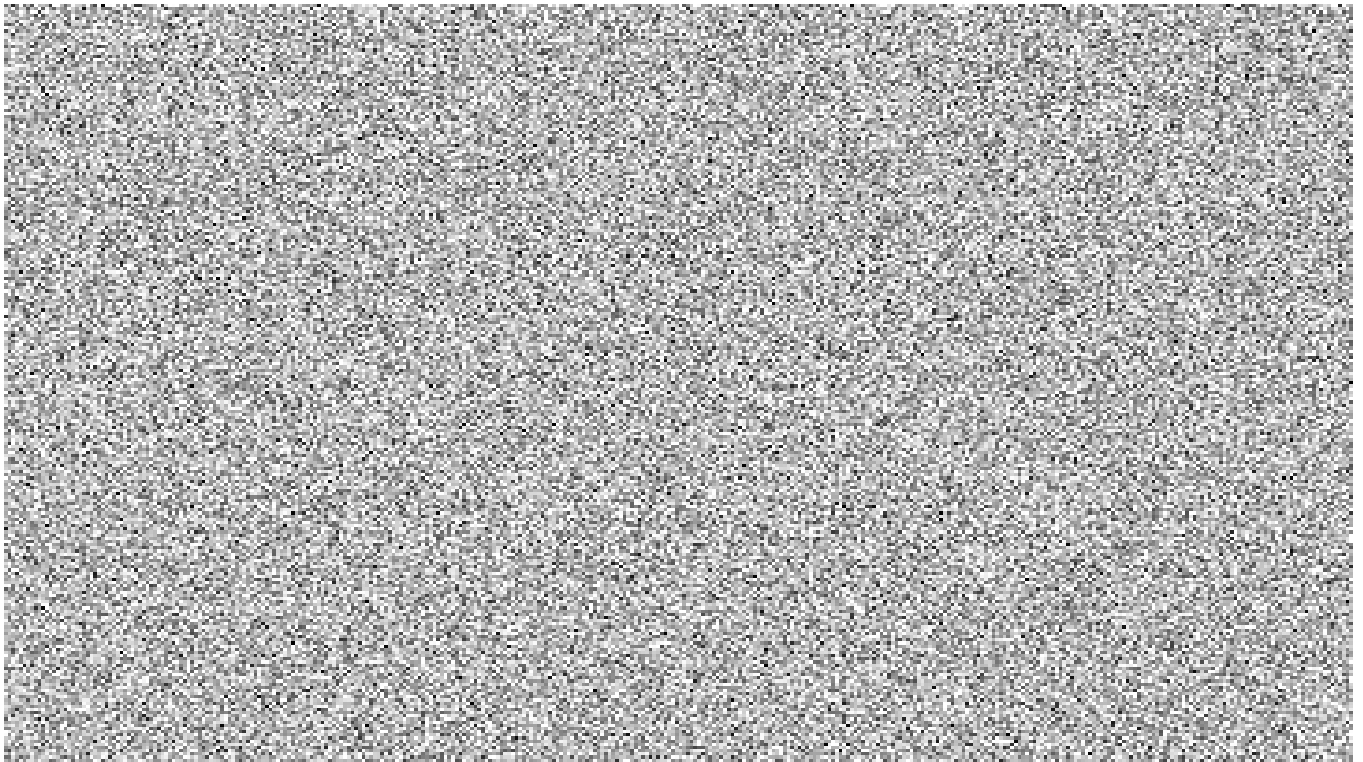


Figure 2: Internal construction

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	6/25
	Technical manual				
Name:	Pozsár Zsolt	Date:	2020.06.12.		

### c) Pinout of connectors

sign	pin	function		voltage level
P1	1	Mains voltage input	L	230V AC
P2	1		N	N
P3	1		PE	
P4	2	Serial console connector	RXD	+5V
	3		TXD	+3.3V
	5		GND	GND
P5	1	Contact of alarm sensor		+9/12V
P6	1			+9/12V
P7	1	External status lamps common	C	
P8	1	Red external status lamp	R	+12V
P9	1	Green external status lamp	G	+12V
P10	1	Lamp output	PE	
P11	1		N	N
P12	1		L	230V AC
P13	1	Ventilator output	PE	
P14	1		N	N
P15	1		L	230V AC
P16	1	Heater output	PE	
P17	1		N	N
P18	1		L	230V AC
P19	1	Internal power supply module	L	230V AC
	2		N	N
	3		PE	
	4		-V	GND
	5		+V	+12V


Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	7/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## 7. Downloadable documentation

The complete documentation of the hardware in the .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.) Name of package is: *mm6d-200612-1.0.tar.gz*.

Content of package - only important files:

**mm6d-hw**

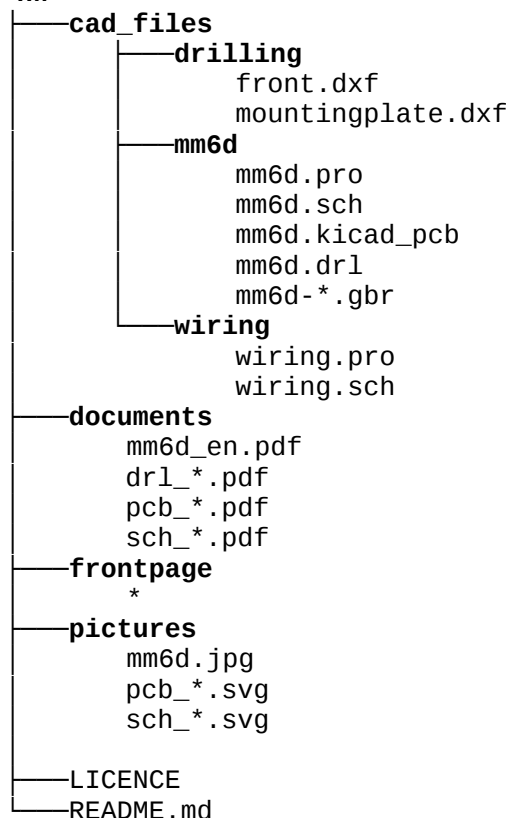

### **KiCAD and LibreCAD files**

#### *drilling draws*

front of box  
mounting plate

#### *documentation of PCB*

project file  
schematic draw  
PCB draw  
drilling file  
Gerber files

#### *internal wiring*

project file  
schematic draw

### **documentation**

Technical manual  
drilling draws  
pcb draws  
schematic draws

### **frontpage**

pictures of frontpage

### **pictures**

look of the unit  
PCB draws  
schematic draws

terms of use

short description

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	8/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.



## II. Software

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	9/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## 1. General description

The task of the program is to operate the hardware and communicate with the central controller.

The program displays initialization steps and error messages on the serial console.

When an HTTP request is received, the client's IP address and username argument are checked. If appropriate, read inputs or or turn outputs on/off. After displays the result on the web interface. Incoming requests are indicated by the flashing of the blue activity LED.

## 2. Setup

You can found source file of software in *source* directory. Before installing the program, you need to set these values:

```
// settings
const char* wifi_ssid      = "";
const char* wifi_password  = "";
const String www_username  = "";
const String allowedaddress = "";
```

## 3. Installation

Use a micro USB cable and Arduino IDE software to install program to microcontroller.

## 4. Using the device

The device operates automatically does not require any human intervention.

### a) Data set and retrieval via HTTP

An example for how to use argument:

<http://192.168.1.21/set/lamp/off?uid=bob>

URL of information and data pages:

URL	type	description	args.
<a href="http://ipaddress/">http://ipaddress/</a>	text/html	Start and information page	
<a href="http://ipaddress/version">http://ipaddress/version</a>	text/plain	Get software name and version	username
<a href="http://ipaddress/get/all">http://ipaddress/get/all</a>		Get all status	
<a href="http://ipaddress/get/alarm">http://ipaddress/get/alarm</a>		Get status of alarm sensors	
<a href="http://ipaddress/get/manualswitch">http://ipaddress/get/manualswitch</a>		Get status of manual switch	
<a href="http://ipaddress/get/operationmode">http://ipaddress/get/operationmode</a>		Get operation mode	
<a href="http://ipaddress/get/protection">http://ipaddress/get/protection</a>		Get status of overcurrent protection	
<a href="http://ipaddress/set/all/off">http://ipaddress/set/all/off</a>		Switch off all outputs	

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	10/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

URL	type	description	args.
<a href="http://ipaddress/set/alarm/off">http://ipaddress/set/alarm/off</a>	text/plain	Restore alarm input	username
<a href="http://ipaddress/set/heater/off">http://ipaddress/set/heater/off</a>		Switch off heater	
<a href="http://ipaddress/set/heater/on">http://ipaddress/set/heater/on</a>		Switch on heater	
<a href="http://ipaddress/set/lamp/off">http://ipaddress/set/lamp/off</a>		Switch off lamp	
<a href="http://ipaddress/set/lamp/on">http://ipaddress/set/lamp/on</a>		Switch on lamp	
<a href="http://ipaddress/set/ventilator/off">http://ipaddress/set/ventilator/off</a>		Switch off ventilator	
<a href="http://ipaddress/set/ventilator/on">http://ipaddress/set/ventilator/on</a>		Switch on ventilator	

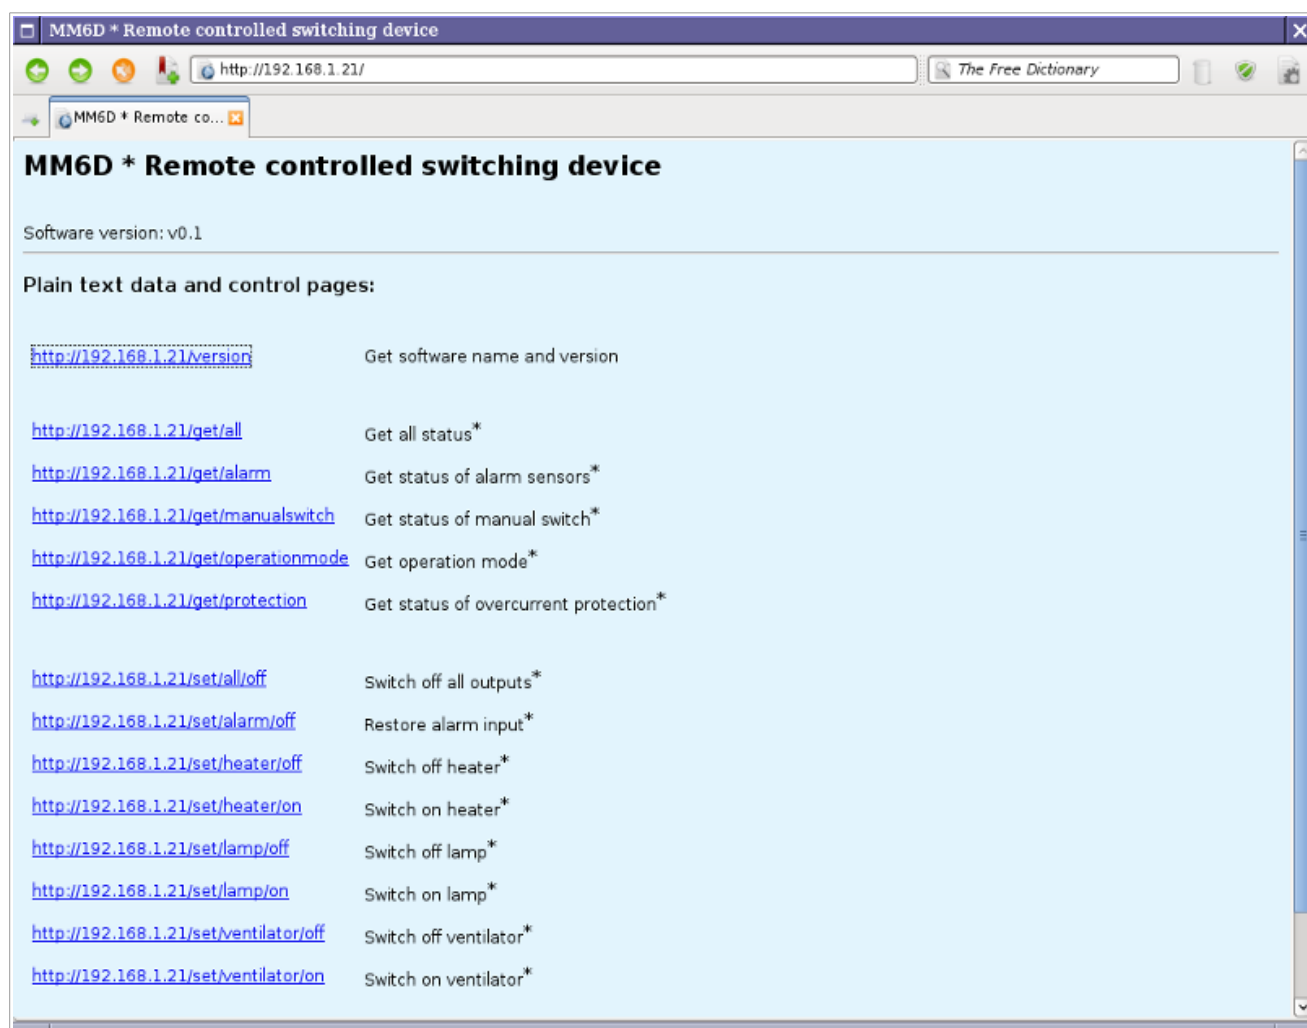


Figure 3: Start page

## b) Connect to console via serial port

The console connector of the device and the RS-232 serial port of the computer must be connected by means of a level shifter adapter with a null modem cable. The level shifter adapter is

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	11/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

required due to the different voltages of the logic levels (0 V / 3.3 V and -12 V / + 12 V).

The console connector of the device and the USB port of the computer must be connected using an Adafruit 954, FTDI TTL-232R-RPI or similar 3.3V serial / USB cable.

### Connection parameters

speed (baudrate): 115 200 bps  
data bits: 8  
parity bit: no  
stop bit: 1  
flow control: no

### Connect via linux terminal

Name of ports (device files):

RS-232 serial port: /dev/ttyS0, /dev/ttyS1, ...  
serial/USB converter: /dev/ttyUSB0, /dev/ttyUSB1, ...

Make sure you are a member of the dialout group:

```
username@localhost$ id
```

If not, set up your group membership:

```
username@localhost$ sudo usermod -a -G dialout username
```

Connect with GNU Screen program:

```
username@localhost$ screen port_name 115200
```

Connect with Minicom program:

```
username@localhost$ minicom -b 115200 -o -D port_name
```

### Connect with Windows terminal (Putty)

Name of ports:

RS-232 serial port: COM1, COM2, ...  
serial port/USB converter: variable, see the device manager

Select the serial connection mode and communication port, set the speed and start the connection.

## 5. Check operation

You can check operation of controller with a web browser, use index.html in *testpage* folder.

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	12/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

```

Bash
MM6D * Remote controlled switching device * v0.1
Copyright (C) 2020 Pozsar Zsolt <pozsar.zsolt@szerafingomba.hu>
* Initializing GPIO ports...done.
* Connecting to wireless network.....done.
  device MAC address: EC:FA:BC:C1:0A:72
  my IP address:      192.168.1.21
  subnet mask:       255.255.255.0
  gateway IP address: 192.168.1.1
* Starting webserver...done.

```

Figure 4: Serial console with messages

MM6D \* Remote controlled switching device | Controller test page

file:///home/pozsarzs/Git/mm6d/testpage/index.html

MM6D \* Remote co...

Controller

IP address of controller:  
192.168.1.21

Username:  
admin

Get controller's data

☐ Get name and version of controller

Submit

Alarm

☐ Get alarm status

☒ Restore alarm status

Submit

Get status

☐ Get all status

☐ Get status of operation mode switch

☐ Get status of manual mode

☐ Get status of overcurrent protection

Submit

Turn off/on outputs

☐ Switch off all outputs

☐ Switch off lamp

☐ Switch on lamp

\* Alarm input is restored.

Figure 5: Test page

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	13/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## 6. Terms of use

This program is free software: you can redistribute it and/or modify it under the terms of the European Union Public License 1.1 version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

You can read the full text of the license online. (Refer to Chapter III for references.)

## 7. Downloadable software package

The software package in .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.)

Name of package is: *mm6d-sw-0.1.tar.gz*.

Content of package - only important files:

<b>mm6d-sw</b>	
— <b>documents</b>	<b>documentation</b>
*	documentation
— <b>testpage</b>	<b>test page</b>
index.html	startpage
— <b>source</b>	<b>source code</b>
mm7d.ino	source code
— LICENCE	terms of use
— README.md	short description

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	14/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

### III. Related links

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	15/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## 1. Hardware and software

Full package	<a href="http://www.szerafingomba.hu/equipments/mm6d/mm6d-200612-0.1-1.0.tar.gz">http://www.szerafingomba.hu/equipments/mm6d/mm6d-200612-0.1-1.0.tar.gz</a>
Download from Github	<a href="http://github.com/pozsarzs/mm6d.git">http://github.com/pozsarzs/mm6d.git</a>
Technical manual	<a href="http://www.szerafingomba.hu/equipments/mm6d/technical-manual-200612-0.1-1.0-en.pdf">http://www.szerafingomba.hu/equipments/mm6d/technical-manual-200612-0.1-1.0-en.pdf</a>
Test page	<a href="http://szerafingomba.hu/equipments/mm6d/testpage/">http://szerafingomba.hu/equipments/mm6d/testpage/</a>

### Schematic and PCB draws (PDF):

Schematics	<a href="http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-1.pdf">http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-1.pdf</a> <a href="http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-2.pdf">http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-2.pdf</a>
PCB solder side	<a href="http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-sold.pdf">http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-sold.pdf</a>
PCB component side	<a href="http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-comp.pdf">http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-comp.pdf</a>
PCB silkscreen	<a href="http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-silk.pdf">http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-silk.pdf</a>

## 2. Terms of use

CC-BY-NC-4.0	<a href="https://creativecommons.org/licenses/by-nc/4.0/legalcode">https://creativecommons.org/licenses/by-nc/4.0/legalcode</a>
CC-BY-NC-4.0	<a href="https://creativecommons.org/licenses/by-nc/4.0/">https://creativecommons.org/licenses/by-nc/4.0/</a>
EUPL v1.2	<a href="https://eupl.eu/1.2/en/">https://eupl.eu/1.2/en/</a>

## 3. Developer and manufacturer

Homepage	<a href="https://www.szerafingomba.hu">https://www.szerafingomba.hu</a>
E-mail	<a href="mailto:info@szerafingomba.hu">info@szerafingomba.hu</a>

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	16/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.



## IV. Annexes


Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	17/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

## Content


1. Error messages and signs
2. Internal wiring
3. Schematic of printed circuit board
4. PCB solder side
5. PCB component side
6. PCB silkscreen

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	18/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.




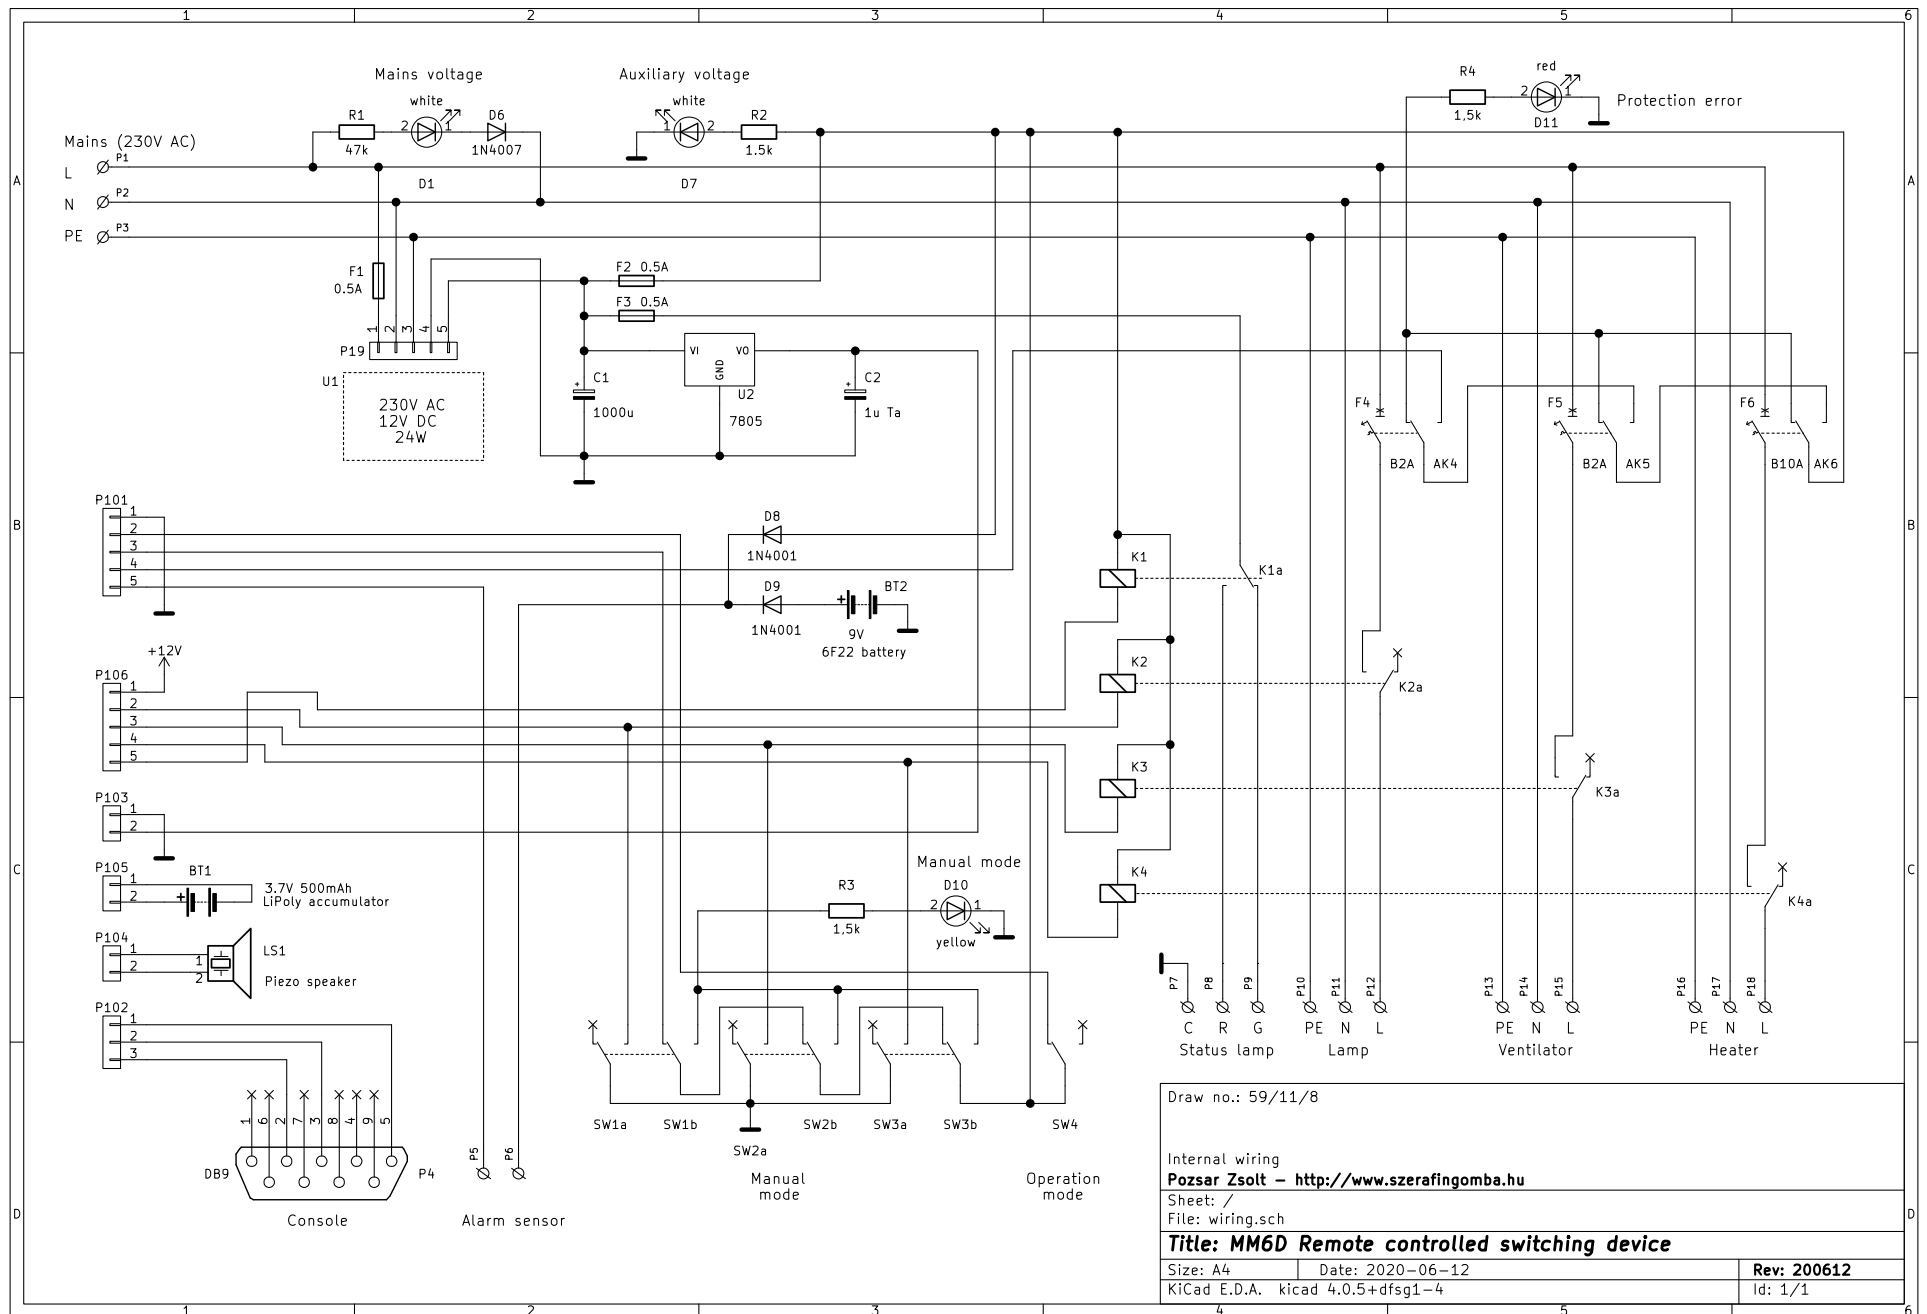

Annex 2: Internal wiring

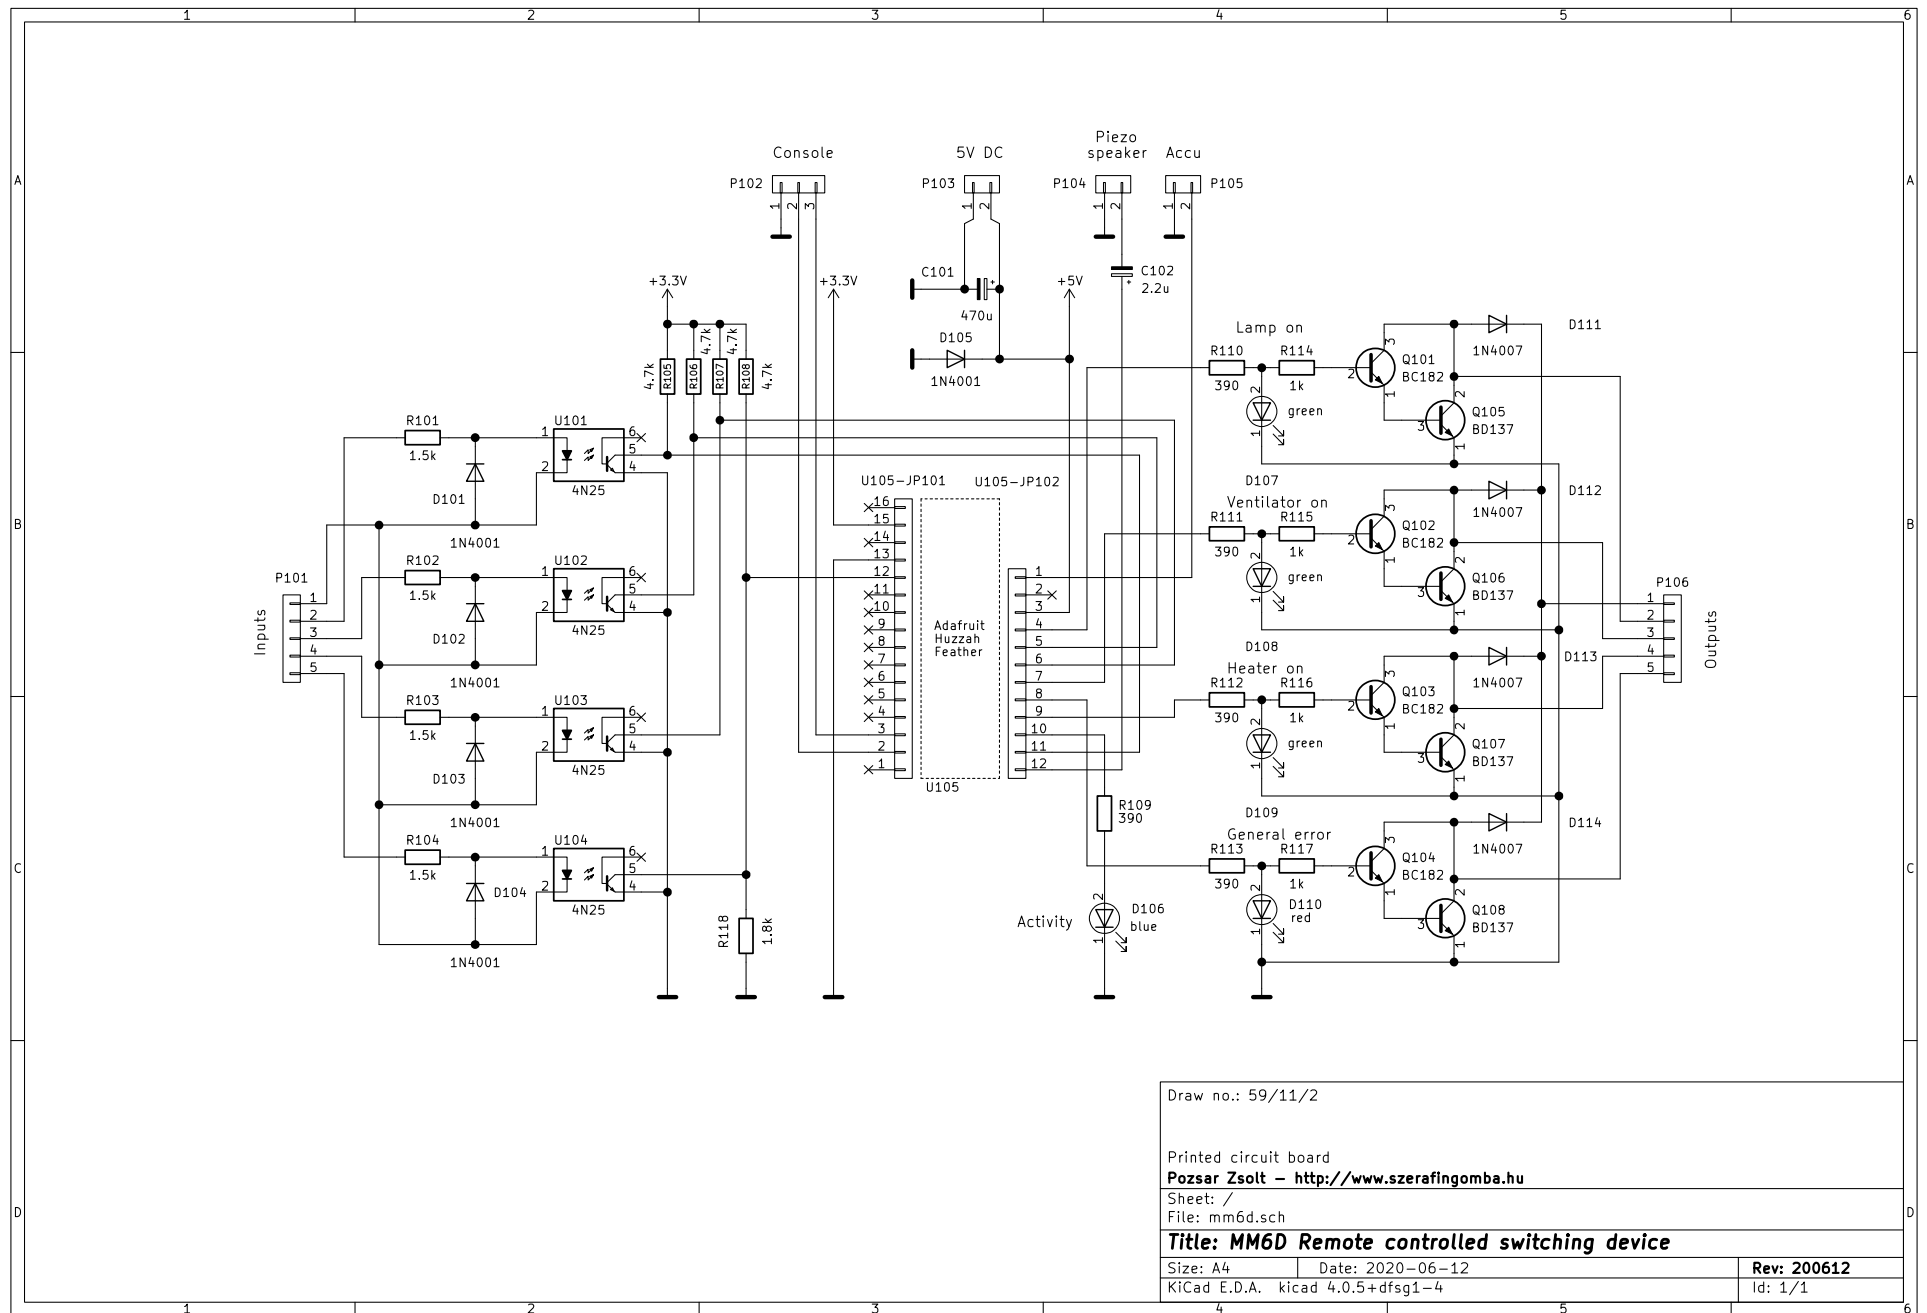


Annex 3: Schematic of printed circuit board

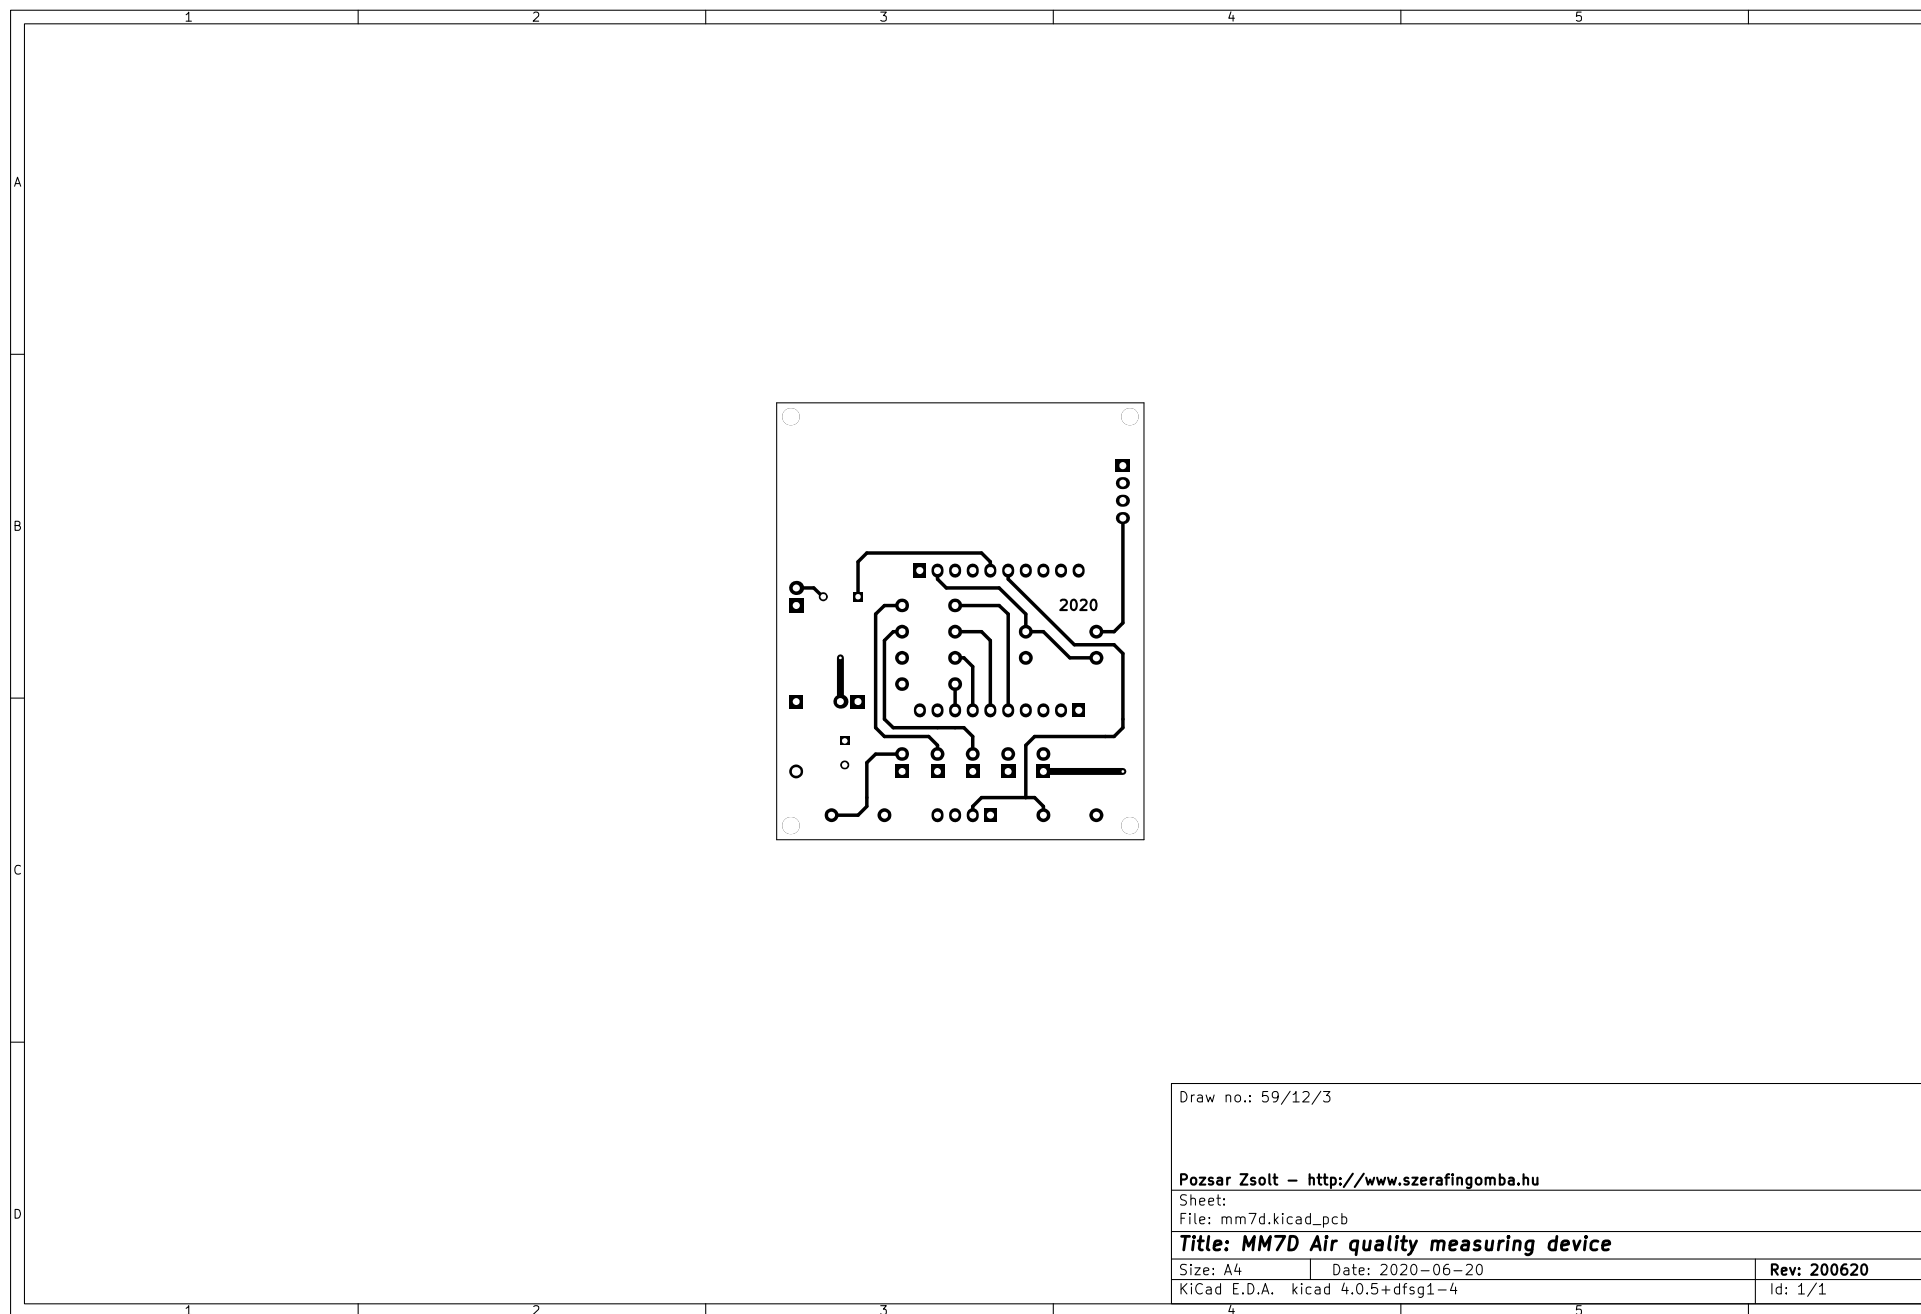


Draw no.: 59/12/3		
Pozsar Zsolt – <a href="http://www.szerafingomba.hu">http://www.szerafingomba.hu</a>		
Sheet:		
File: mm7d.kicad_pcb		
<b>Title: MM7D Air quality measuring device</b>		
Size: A4	Date: 2020-06-20	Rev: 200620
KiCad E.D.A. kicad 4.0.5+dfsg1-4	Id: 1/1	

Annex 4: PCB solder side

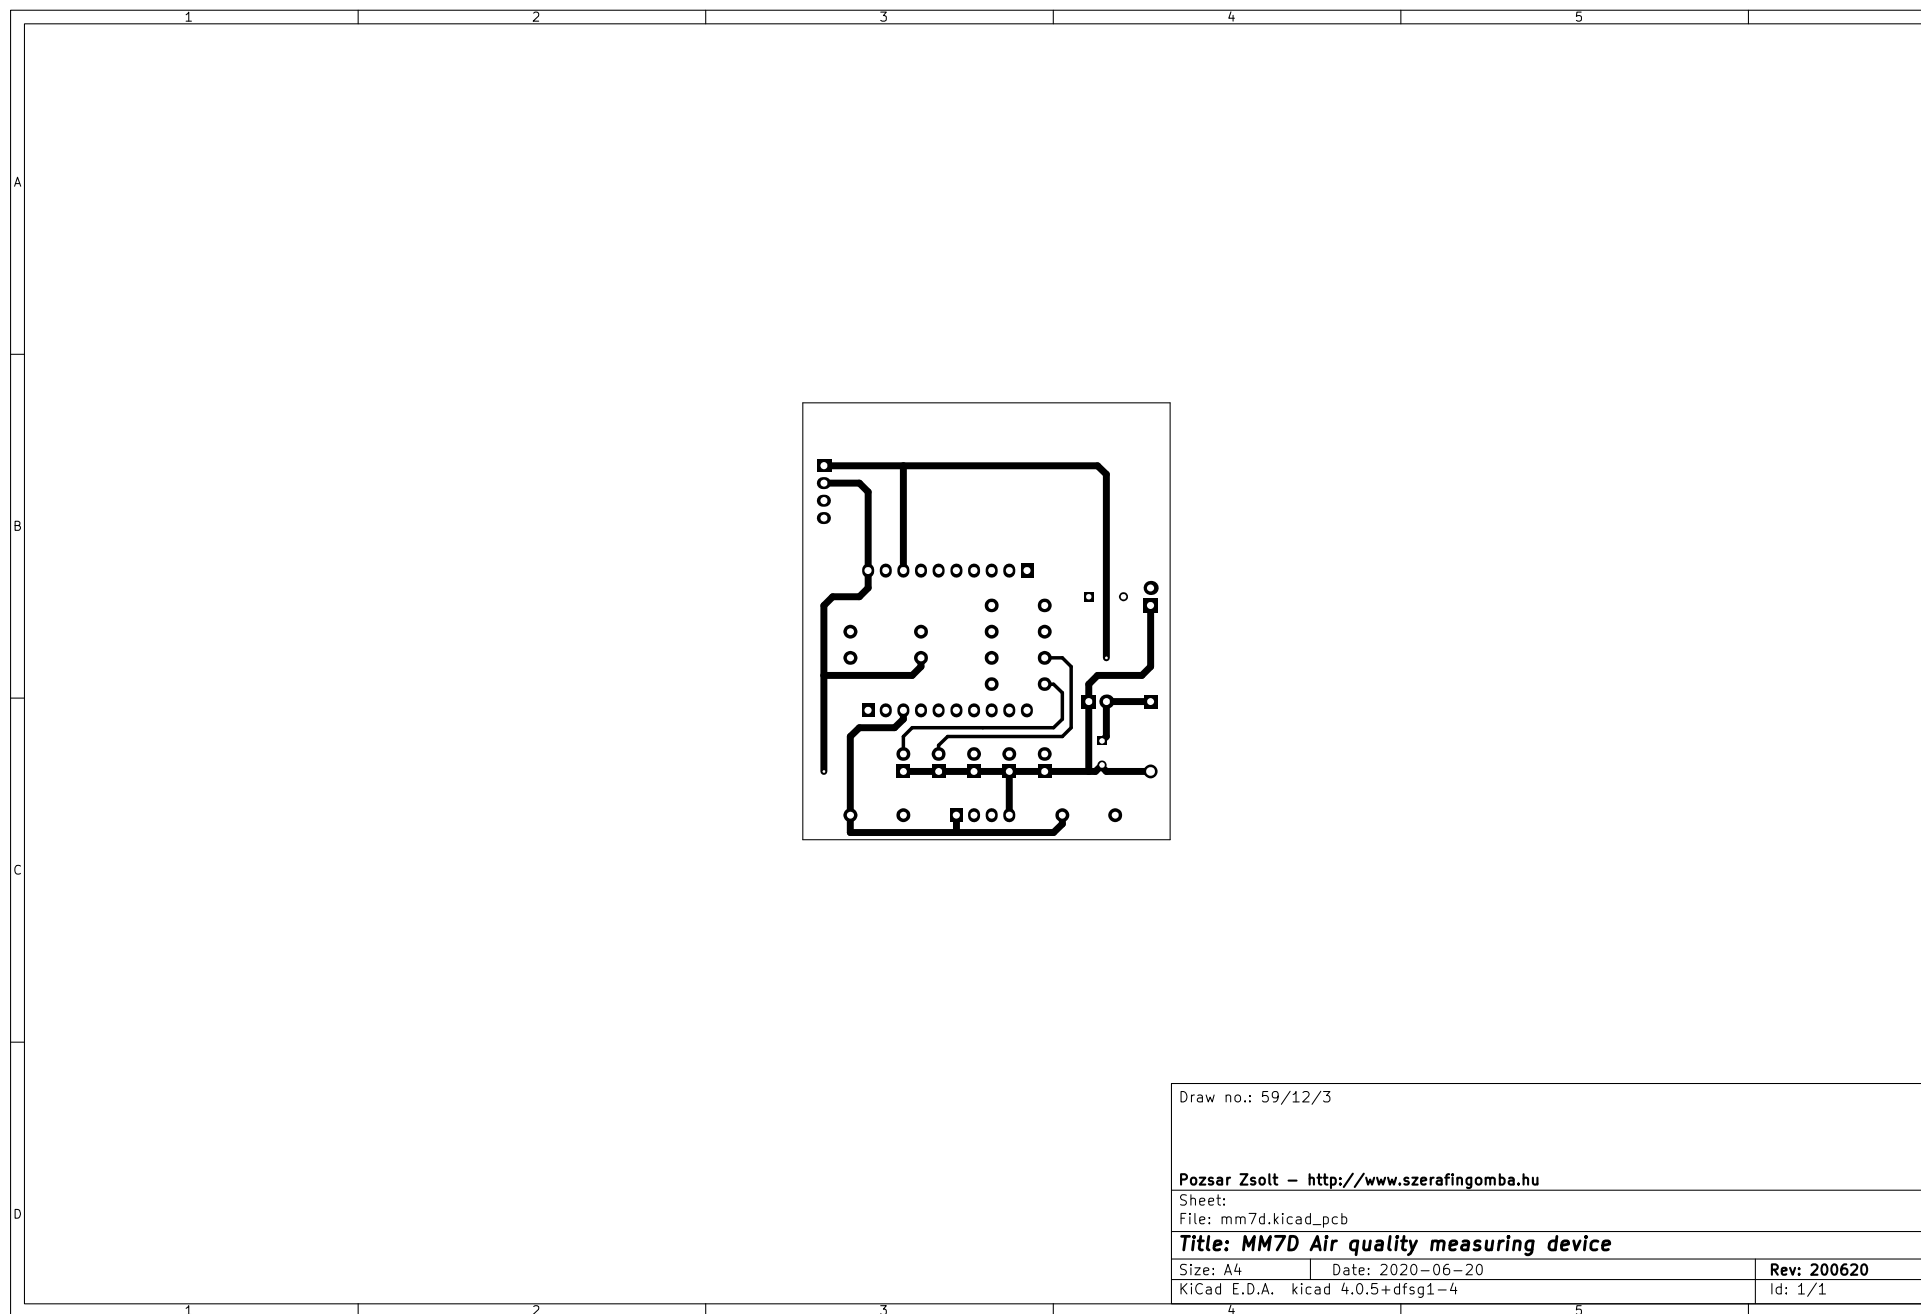

Annex 5: PCB component side

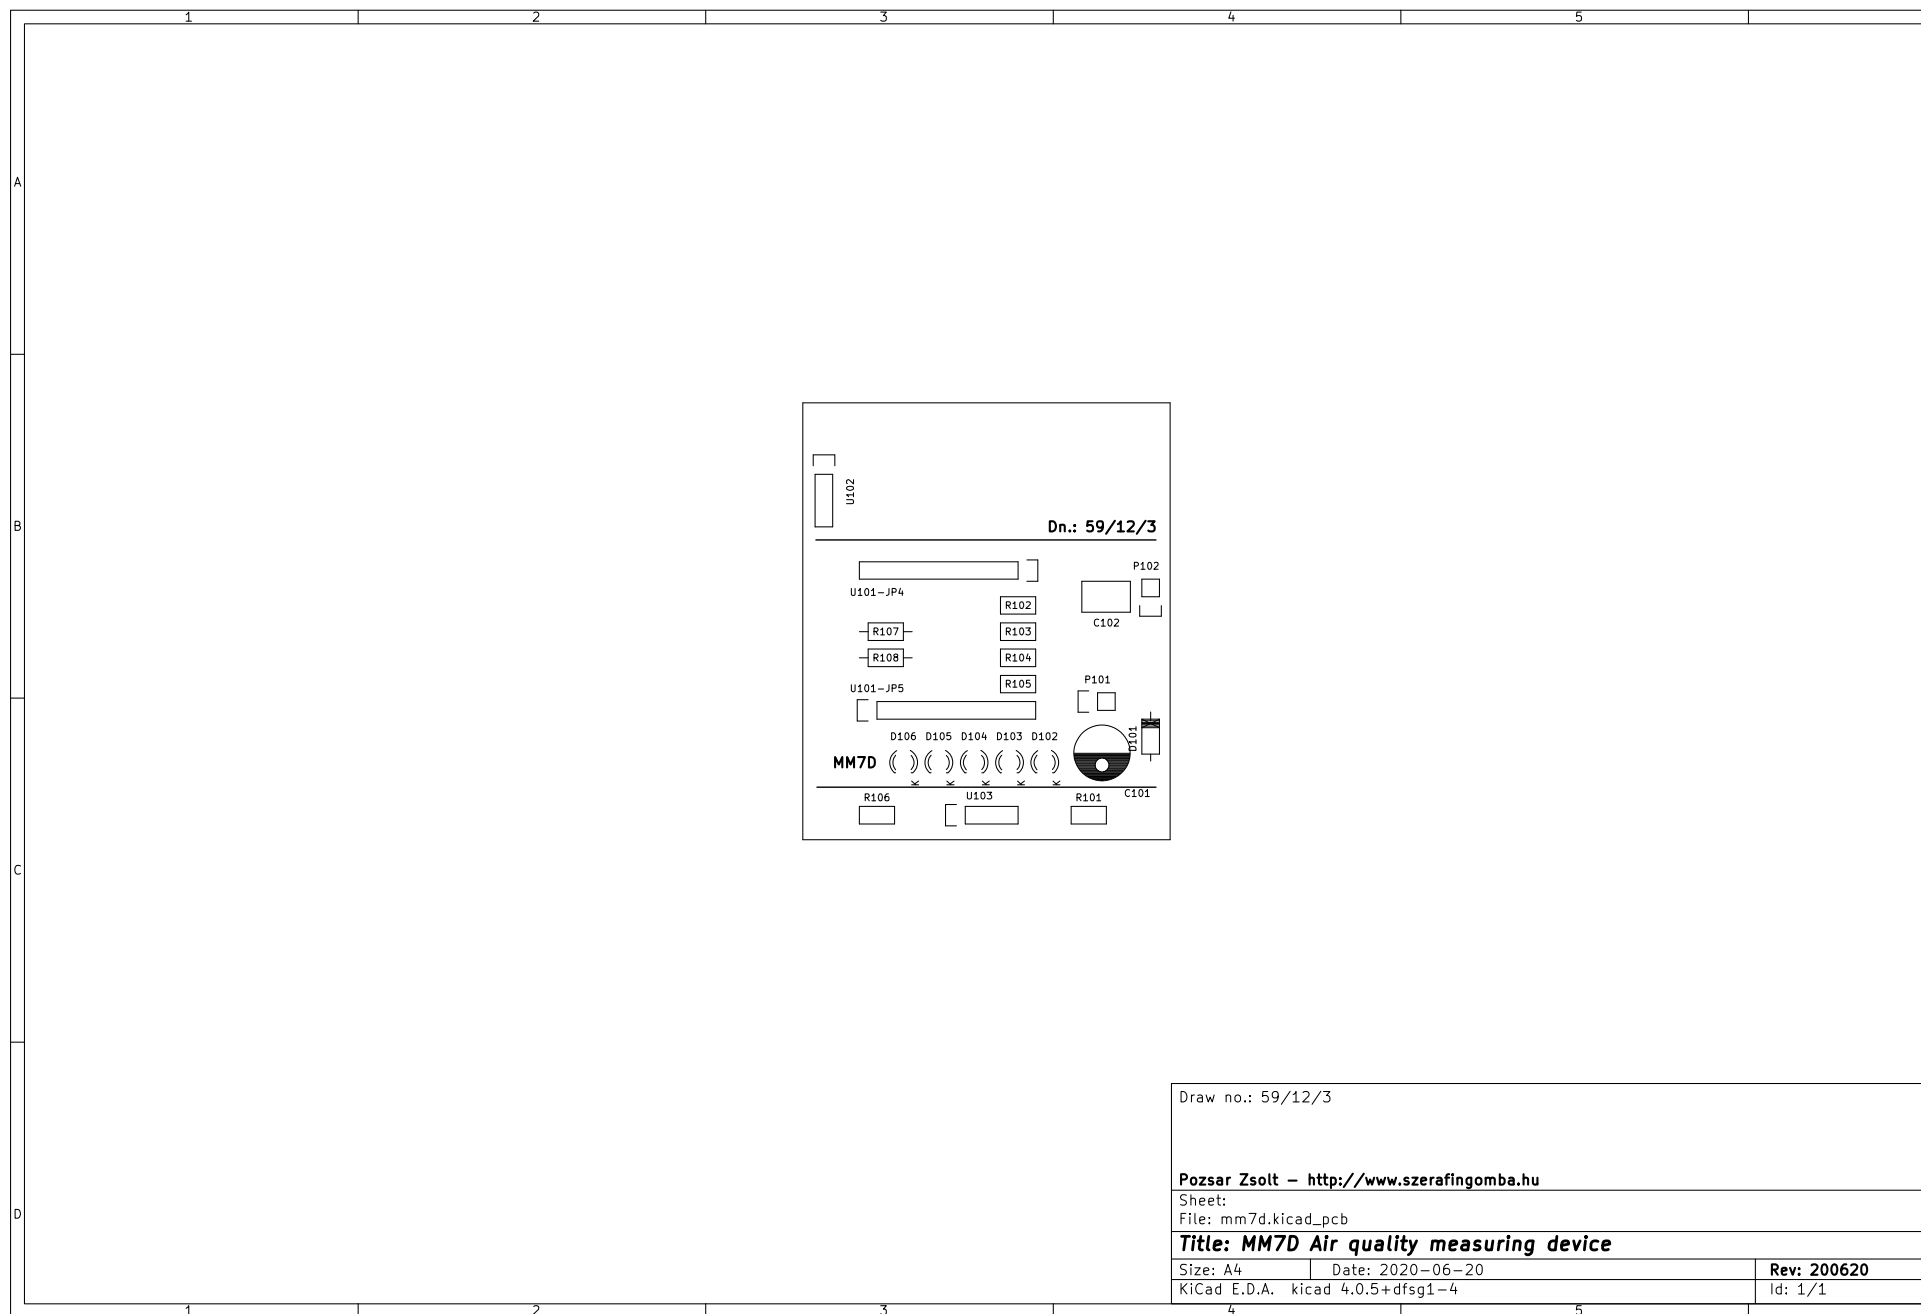

Annex 6: PCB silkscreen