# MM6D Remote controlled switching device

## Technical manual



Hardware version: v200612 Software version: v0.2 Technical manual version: v2.0 Issue date: 2021.02.21. Draw number: 59/11/1

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	1/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

## Content

I. Hardware	3
1. Technical data	4
2. General description	
3. Schematic and PCB draws	
4. Other draws and documents	
5. Terms of use	
6. Look of device	5
a) Manuals	5
b) Internal construction	6
c) Pinout of connectors	7
7. Downloadable documentation	8
II. Software	9
1. General description	10
2. Setup	
3. Installation	
4. Using the device	10
a) Data set and retrieval via HTTP	10
b) Connect to console via serial port	12
5. Check operation	12
6. Terms of use	14
7. Downloadable software package	14
III. Related links	15
1. Hardware	16
2. Software	
3. Terms of use	
4. Developer and manufacturer	
•	
IV. Annexes	1/
Content	18

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	2/28	
	Technical manual					
Na	me:	Pozsár Zsolt			Date:	2021.02.21.

## I. Hardware

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	3/28
	Technical manual				
Name	Pozsár Zsolt			Date:	2021.02.21.

#### 1. Technical data

Supply voltage: 230V AC IP protection: IP 55

Auxiliary voltage: 12V DC Mass of cover: termoplast (ABS)

Supply current: max. 15 A Communication: Wireless LAN,

Isolation class: Class I TTL 3.3V serial port

Mechanical size: 300 x 220 x 120 mm Get/set data: via HTTP

Administration: via serial connection

### 2. General description

The device has four 12V DC inputs separated by an optocoupler and four relay outputs. These have a predefined function. Their status can be queried or set via HTTP. The power outputs can also be switched manually. The continuous operation of the microcontroller is ensured by a 3.7V 500mAh LiPoly battery, the alarm sensor is provided by a non-rechargeable 6F22 9V battery.

#### **Load capacity of outputs:**

Function	Voltage	Maximal load	Overcurrent protection	Watched?
Status lamp outputs	12V DC	6W	fuse	no
Lamp output	230V AC	460W		yes
Ventilator output	230V AC	460W	overcurrent breaker	yes
Heater output	230V AC	2.3 kW	breaker	yes

#### 3. Schematic and PCB draws

The wiring diagrams of the device is shown in Annex 2, schematic and PCB draws are in Annex 3-7. You can download it as part of the complete documentation or in separate PDF, SVG and KiCAD formats from the developer/manufacturer's website. The Gerber files needed for production of boards are included in the package.

#### 4. Other draws and documents

Documentation package contents draw of frontpage in ODG and PDF and drilling draw in DXF and PDF format.

#### 5. Terms of use

Hardware documentation can be modified and/or redistributed under the Creativ Commons 4.0 Attribution Non-Commercial (CC-BY-NC-4.0) License. You can read the full text of the license online. (Refer to Chapter III for references.)

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	4/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

#### 6. Look of device

#### a) Manuals

- 1. Mains voltage signal light (white LED)
- 2. Auxiliary voltage signal light (white LED)
- 3. Activity signal light (blue LED)
- 4. Manual mode signal light (yellow LED)
- 5. Alarm/General error signal light (red LED)
- 6. Protection error signal light (red LED)
- 7. Lamp on signal light (green LED)

- 8. Ventilator on signal light (green LED)
- 9. Heater on signal light (green LED)
- 10. Lamp manual mode switch (SW1)
- 11. Ventilator manual mode switch (SW2)
- 12. Heater manual mode switch (SW3)
- 13. Operation mode switch (SW4)

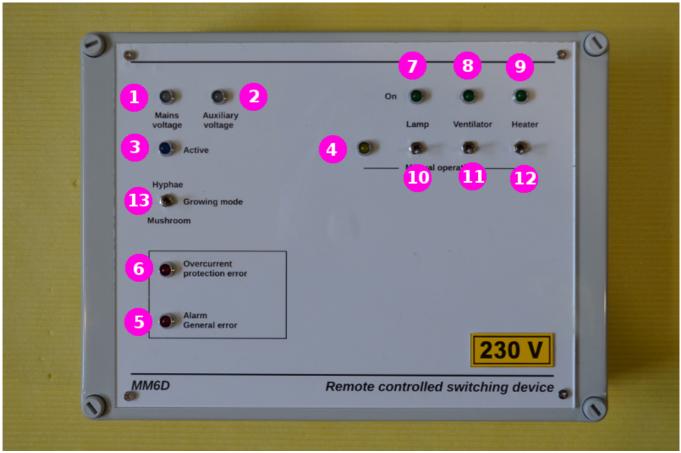


Figure 1: Manuals

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	5/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

#### b) Internal construction

- 1. Main board
- 2. Display board
- 3. Accumulator of microcontroller (BT101)
- 4. Battery of alarm input (BT201)
- 5. Transformers
- 6. Fuse of transformers (F4)
- 7. Fuse of auxiliary voltage (F6)
- 8. Fuse of external status lamps (F5)
- 9. Relay of external status lamp (K4)
- 10. Relay of lamp output (K1)
- 11. Relay of ventilator output (K2)
- 12. Relay of heater output (K3)

- 13. Breaker of lamp output (F1)
- 14. Breaker of ventilator output (F2)
- 15. Breaker of heater output (F3)
- 16. Mains connectors (P1-3)
- 17. Console connector (P18)
- 18. Alarm sensor connectors (P13-14)
- 19. Status lamp connectors (P15-17)
- 20. Lamp connectors (P4-6)
- 21. Ventilator connectors (P7-9)
- 22. Heater connectors (P10-12)
- 23. Mounting holes

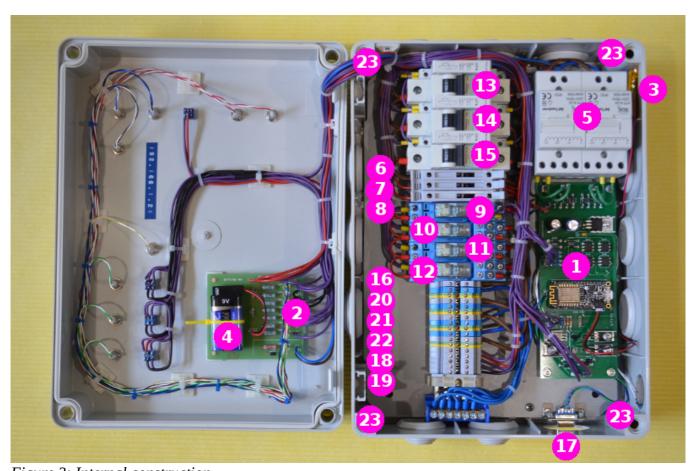


Figure 2: Internal construction

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	6/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

## c) Pinout of connectors


sign	pin	function		voltage level
P1	1		L	230V AC
P2	1	Mains voltage input	N	
Р3	1		PE	
P4	1		L	230V AC
P5	1	Lamp output	N	
P6	1		PE	
P7	1		L	230V AC
P8	1	Ventilator output	N	
P9	1		PE	
P10	1		L	230V AC
P11	1	Heater output	N	
P12	1		PE	
P13	1			
P14	1	Contact of alarm sensor		+9/12V
P15	1	Green external status lamp	G	+12V
P16	1	Red external status lamp	R	+12V
P17	1	External status lamps common	С	
	2		RXD	+5V
P18	3	Serial console connector	TXD	+3.3V
	5		GND	GND

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	7/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

#### 7. Downloadable documentation

The complete documentation of the hardware in the .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.) Name of package is: *mm6d-hw-200612-2.0.tar.gz*.

Content of package - only important files:

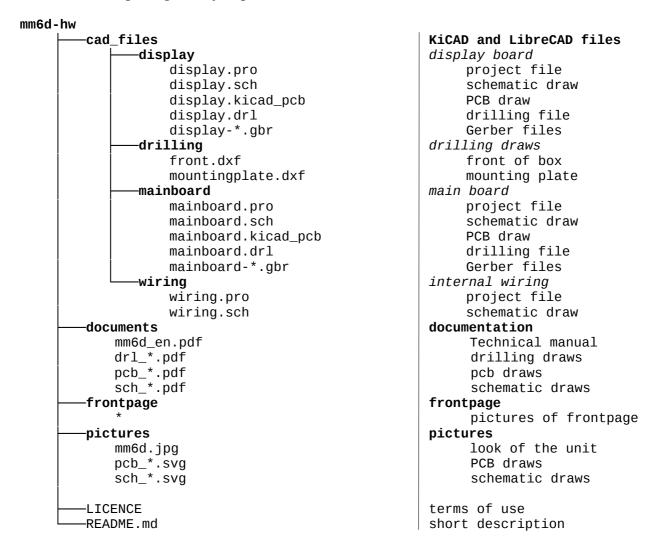

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	8/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

## **II. Software**

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	9/28	
	Technical manual					
Naı	me:	Pozsár Zsolt			Date:	2021.02.21.

## 1. General description

The task of the program is to operate the hardware and communicate with the central controller.

The program displays initialization steps and error messages on the serial console.

When an HTTP request is received, the client's IP address and username argument are checked. If appropriate, read inputs or or turn outputs on/off. After displays the result on the web interface. Incoming requests are indicated by the flashing of the blue activity LED.

#### 2. Setup

You can found source file of software in *source* directory. Before installing the program, you need to set these values:

```
// settings
const char* wifi_ssid = "";
const char* wifi_password = "";
const String www_username = "";
const String allowedaddress = "";
```

#### 3. Installation

Use a micro USB cable and Arduino IDE software to install program to microcontroller.

## 4. Using the device

The device operates automatically does not require any human intervention.

#### a) Data set and retrieval via HTTP

An example for how to use argument:

http://192.168.1.21/set/lamp/off?uid=bob

 $\underline{http://192.168.1.12/operation?uid=bob\&a=0\&l=1\&v=0\&h=0}$ 

#### URL of information and data pages:

URL	type	description	args.
http://ipaddress/	text/html	Start and information page	
http://ipaddress/version	text/plain	Get software name and version	
http://ipaddress/operation		Get all data, restore alarm and set outs	uid, l, v, h
http://ipaddress/get/all		Get all status	uid
http://ipaddress/get/alarm		Get status of alarm sensors	
http://ipaddress/get/manualswitch		Get status of manual switch	

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	10/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

URL	type	description	args.
http://ipaddress/get/operationmode		Get operation mode	
http://ipaddress/get/protection		Get status of overcurrent protection	
http://ipaddress/set/all/off		Switch off all outputs	
http://ipaddress/set/alarm/off		Restore alarm input	
http://ipaddress/set/heater/off		Switch off heater	
http://ipaddress/set/heater/on		Switch on heater	
http://ipaddress/set/lamp/off	text/plain	Switch off lamp	uid
http://ipaddress/set/lamp/on		Switch on lamp	
http://ipaddress/set/ventilator/off		Switch off ventilator	
http://ipaddress/set/ventilator/off		Switch on ventilator	

uid: user IDa: restore alarm

l, v, h: outputs (lamp, ventilator and heater)

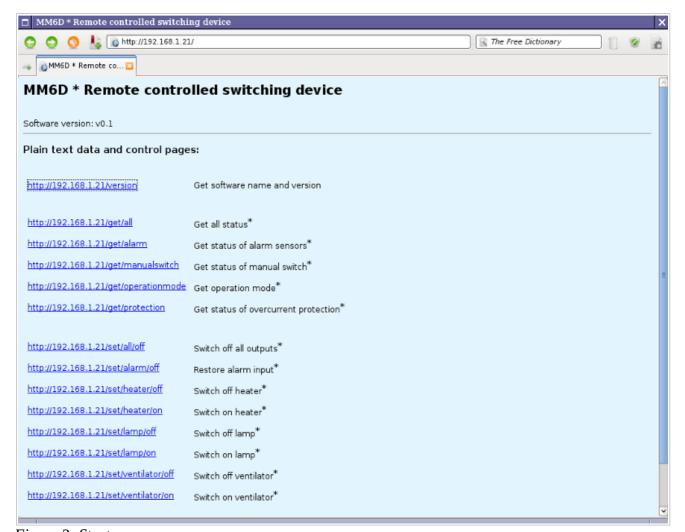


Figure 3: Start page

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	11/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

#### b) Connect to console via serial port

The console connector of the device and the RS-232 serial port of the computer must be connected by means of a level shifter adapter with a null modem cable. The level shifter adapter is required due to the different voltages of the logic levels (0 V / 3.3 V and -12 V / + 12 V).

The console connector of the device and the USB port of the computer must be connected using an Adafruit 954, FTDI TTL-232R-RPI or similar 3.3V serial / USB cable.

#### **Connection parameters**

speed (baudrate): 115 200 bps

data bits: 8
parity bit: no
stop bit: 1
flow control: no

#### **Connect via linux terminal**

Name of ports (device files):

RS-232 serial port: /dev/ttyS0, /dev/ttyS1, ...

serial/USB converter: /dev/ttyUSB0, /dev/ttyUSB1, ...

Make sure you are a member of the dialout group:

```
username@localhost$ id
```

If not, set up your group membership:

```
username@localhost$ sudo usermod -a -G dialout username
```

Connect with GNU Screen program:

```
username@localhost$ screen port_name 115200
```

Connect with Minicom program:

```
username@localhost$ minicom -b 115200 -o -D port_name
```

#### **Connect with Windows terminal (Putty)**

Name of ports:

RS-232 serial port: COM1, COM2, ...

serial port/USB converter: variable, see the device manager

Select the serial connection mode and communication port, set the speed and start the connection.

## 5. Check operation

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	12/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

Figure 4: Serial console with messages

You can check operation of controller with a web brower, use index.html in *testpage* folder.

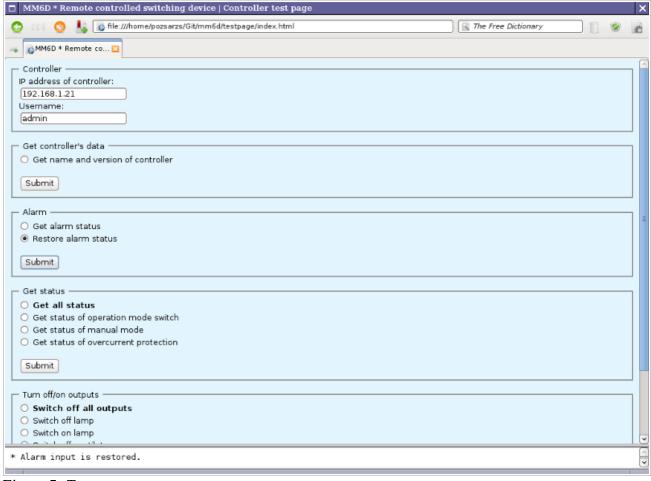


Figure 5: Test page

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	13/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

#### 6. Terms of use

This program is free software: you can redistribute it and/or modify it under the terms of the European Union Public License 1.1 version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.


You can read the full text of the license online. (Refer to Chapter III for references.)

## 7. Downloadable software package

The software package in .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.)

Name of package is: *mm6d-sw-0.2.tar.gz*.

Content of package - only important files:

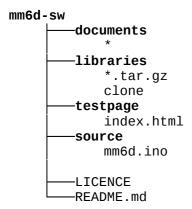

documentation
documentation
external libraries
libraries in archive file
clone script
test page
startpage
source code
source code
terms of use
short description

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	14/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

## III. Related links

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	15/28
	Technical manual				
Name	Pozsár Zsolt			Date:	2021.02.21.

#### 1. Hardware

Full package <a href="http://www.szerafingomba.hu/equipments/mm6d/mm6d-hw-200612-2.0.tar.gz">http://www.szerafingomba.hu/equipments/mm6d/mm6d-hw-200612-2.0.tar.gz</a>

Download from Github <a href="http://github.com/pozsarzs/mm6d-hw.git">http://github.com/pozsarzs/mm6d-hw.git</a>

Technical manual <a href="http://www.szerafingomba.hu/equipments/mm6d/technical-manual-200612-0.2-2.0-en.pdf">http://www.szerafingomba.hu/equipments/mm6d/technical-manual-200612-0.2-2.0-en.pdf</a>

#### Schematic and PCB draws (PDF):

Schematics <a href="http://www.szerafingomba.hu/equipments/mm6d/sch\_mm6d-1.pdf">http://www.szerafingomba.hu/equipments/mm6d/sch\_mm6d-1.pdf</a>

http://www.szerafingomba.hu/equipments/mm6d/sch\_mm6d-2.pdf http://www.szerafingomba.hu/equipments/mm6d/sch\_mm6d-3.pdf

PCB main board <a href="http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-1-sold.pdf">http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-1-sold.pdf</a>

http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-1-comp.pdf http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-1-silk.pdf

PCB display board <a href="http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-2-sold.pdf">http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-2-sold.pdf</a>

http://www.szerafingomba.hu/equipments/mm6d/pcb\_mm6d-2-silk.pdf

#### 2. Software

Software package <a href="http://www.szerafingomba.hu/softwares/mm6d/mm6d-sw-0.2.tar.gz">http://www.szerafingomba.hu/softwares/mm6d/mm6d-sw-0.2.tar.gz</a>

Download from Github <a href="http://github.com/pozsarzs/mm6d-sw.git">http://github.com/pozsarzs/mm6d-sw.git</a>

#### 3. Terms of use

CC-BY-NC-4.0 <a href="https://creativecommons.org/licenses/by-nc/4.0/legalcode">https://creativecommons.org/licenses/by-nc/4.0/legalcode</a>

CC-BY-NC-4.0 <a href="https://creativecommons.org/licenses/by-nc/4.0/">https://creativecommons.org/licenses/by-nc/4.0/</a>

EUPL v1.2 <a href="https://eupl.eu/1.2/en/">https://eupl.eu/1.2/en/</a>

### 4. Developer and manufacturer

Homepage <a href="https://www.szerafingomba.hu">https://www.szerafingomba.hu</a>

E-mail <u>info@szerafingomba.hu</u>

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	16/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

## **IV.** Annexes

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	17/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

### Content


- 1. Error messages and signs
- 2. Internal wiring
- 3. Schematic of main board
- 4. PCB solder side of main board
- 5. PCB component side of main board
- 6. PCB silkscren of main board
- 7. Schematic of display board
- 8. PCB solder side of display board
- 9. PCB silkscren of display board

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	18/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.


sign	message	web	console	blue LED	red LED	sound
E01	Control timeout error!	no	yes	yes	yes	no
E02	Overcurrent protection error!	no	yes	no	yes	beep
E03	Authentication error!	yes	yes	no	no	2x beep
E04	Not allowed client IP address!	yes	yes	no	no	3 x beep
E05	Page not found!	yes	yes	no	no	no

Annex 1: Error messages and signs


Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	19/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2021.02.21.

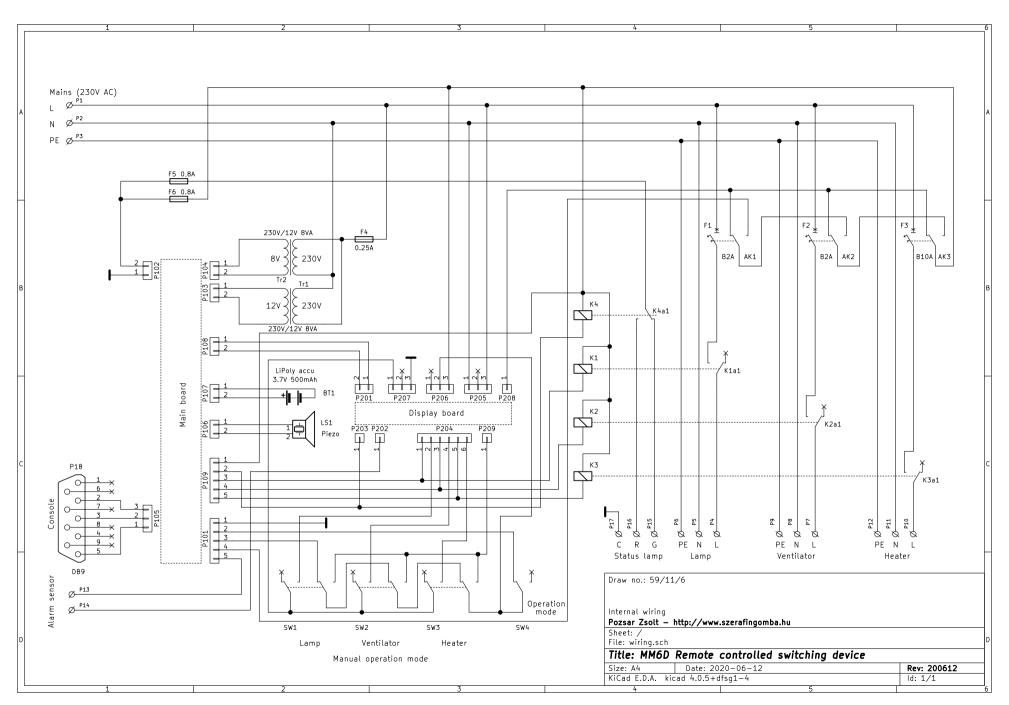


Annex 2: Internal wiring

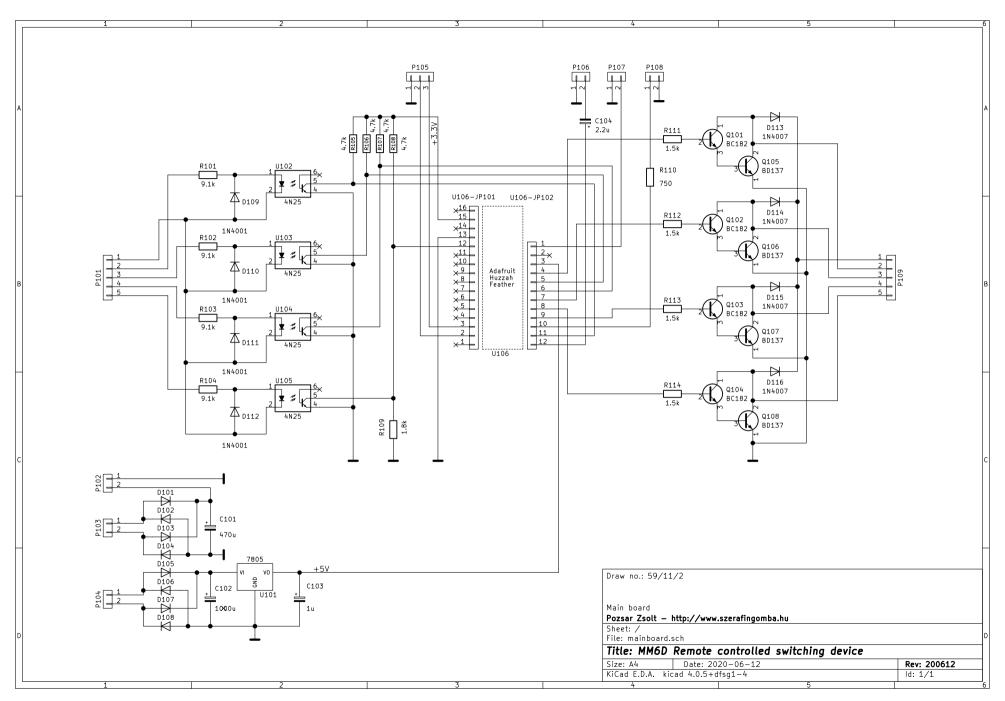


Annex 3: Schematic of main board

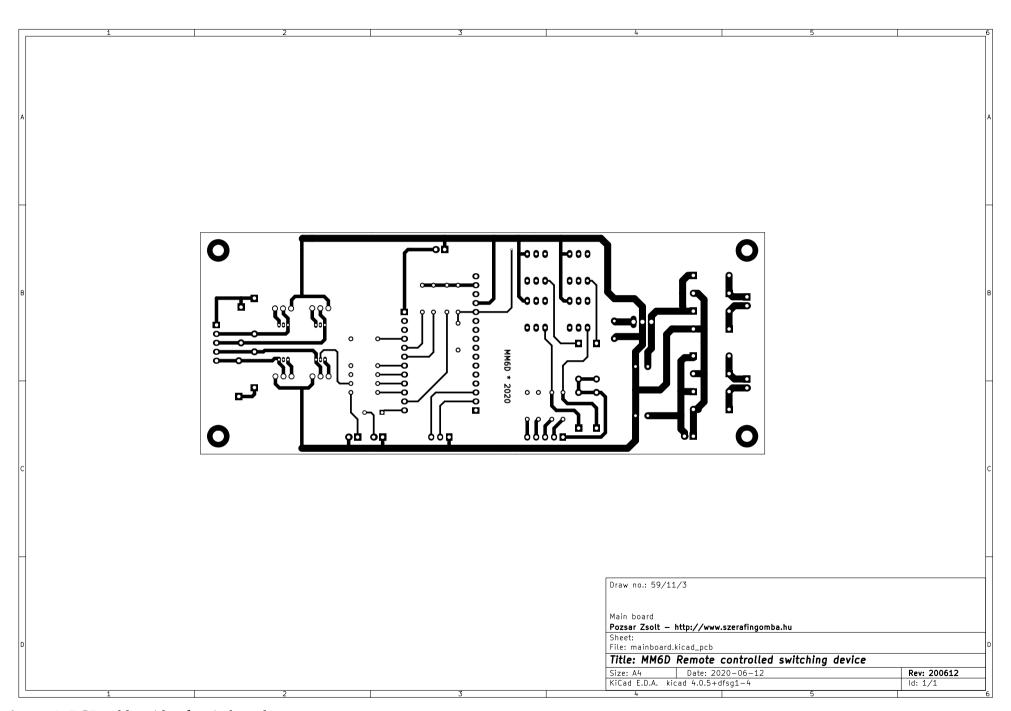


Annex 4: PCB solder side of main board

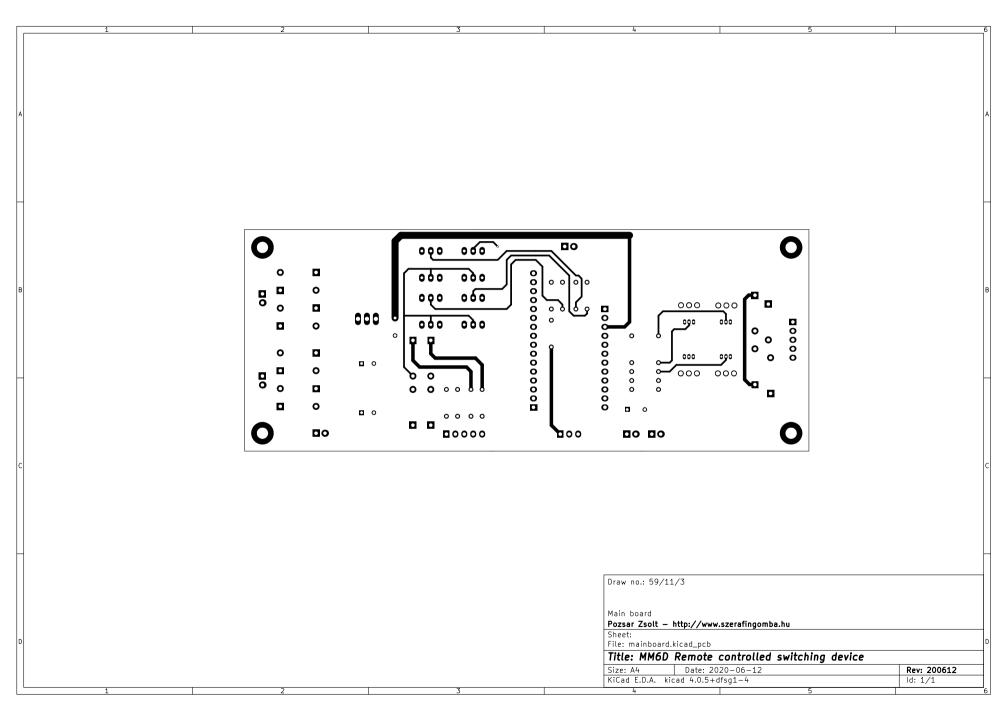


Annex 5: PCB component side of main board

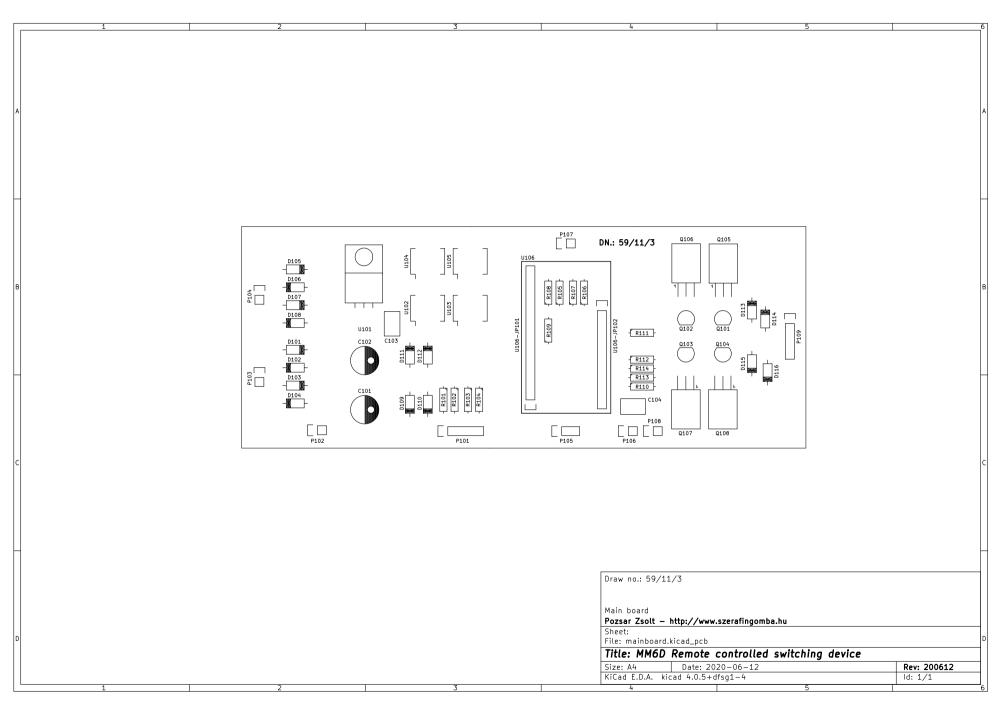


Annex 6: PCB silkscreen of main board

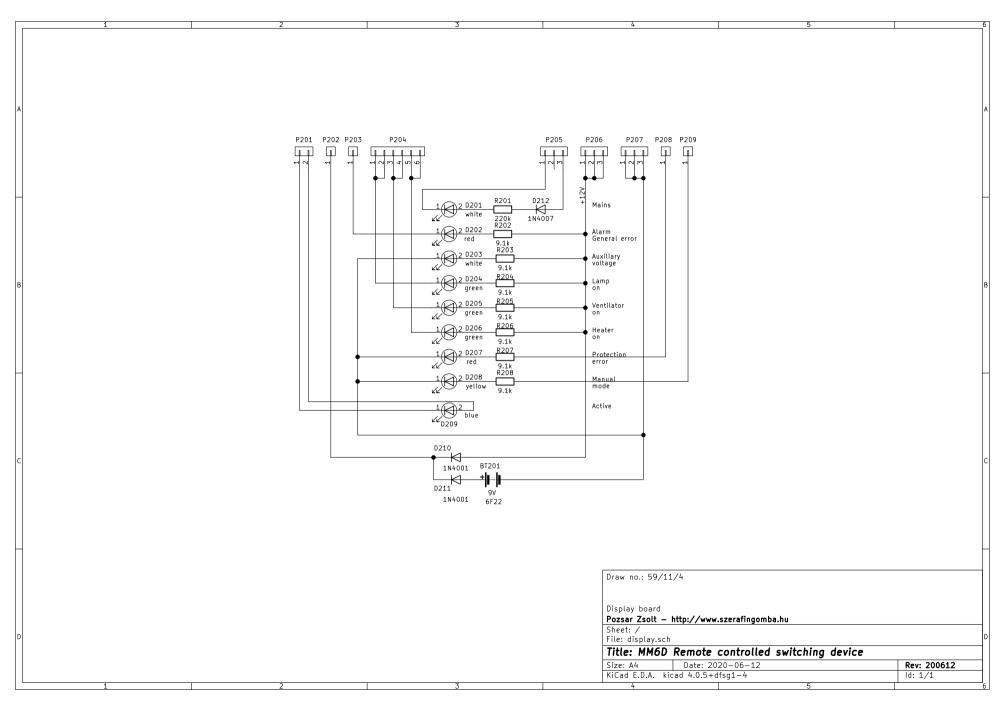

Annex 7: Schematic of display board

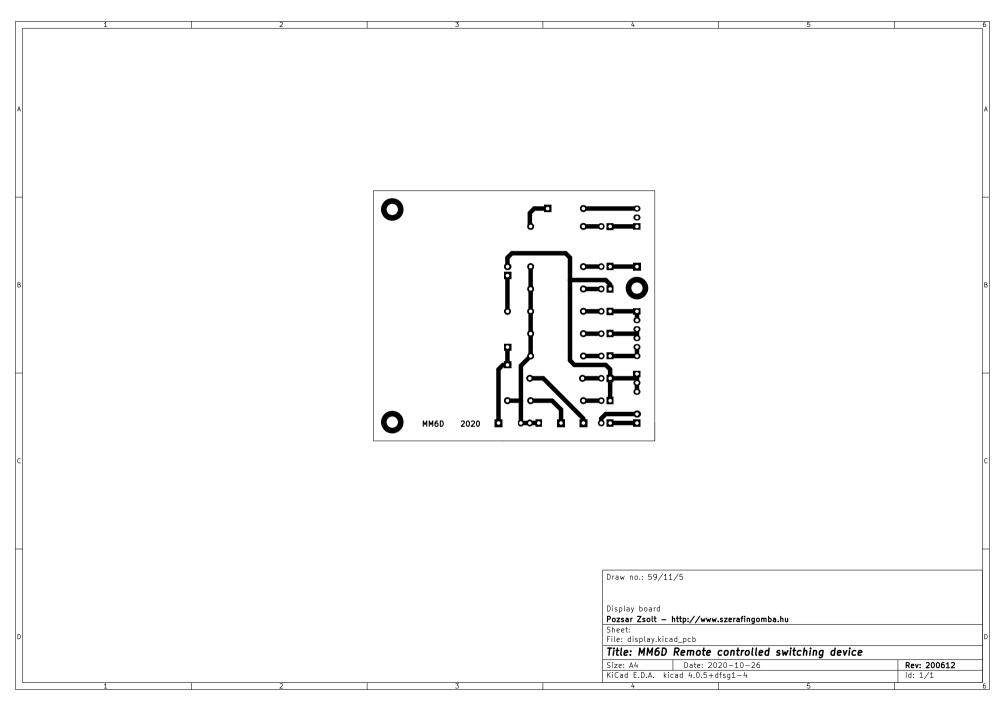

Annex 8: PCB solder side of display board

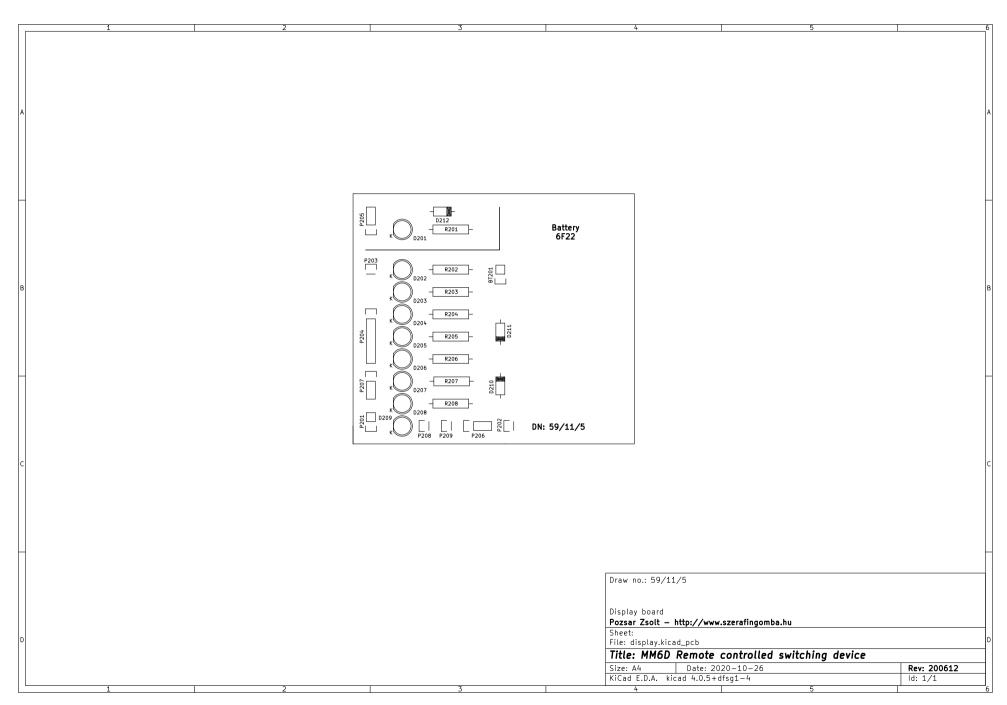

Annex 9: PCB silkscreen of display board