
MM6D Remote controlled switching device

Technical manual

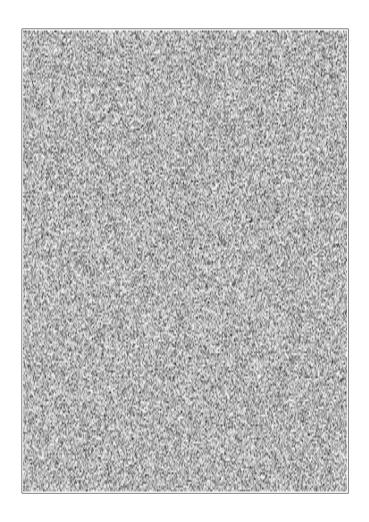

Hardware version: v200612 Software version: v0.1 Technical manual version: v1.0 Issue date: 2020.06.12. Draw number: 59/11/1

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	1/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

Content

I. Hardware	3
1. Technical data 2. General description	4
Schematic and PCB draws Other draws and documents	
5. Terms of use	
a) Manuals and connectors	5
b) Internal construction	7
7. Downloadable documentation	
1. General description.	
2. Setup	10
3. Installation4. Using the device	
a) Data set and retrieval via HTTP b) Connect to console via serial port	
5. Check operation	12
6. Terms of use7. Downloadable software package	
III. Related links	
Hardware and software Terms of use Developer and manufacturer	16
IV. Annexes	
Content	18

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	2/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

I. Hardware

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	3/25
	Technical manual				
Name	Pozsár Zsolt			Date:	2020.06.12.

1. Technical data

Supply voltage: 230V AC IP protection: IP 55

Auxiliary voltage: 12V DC Mass of cover: termoplast (ABS)

Supply current: max. 15 A Communication: Wireless LAN,

Isolation class: Class I TTL 3.3V serial port

Mechanical size: 300 x 220 x 120 mm Get/set data: via HTTP

Administration: via serial connection

2. General description

The device has four 12V DC inputs separated by an optocoupler and four relay outputs. These have a predefined function. Their status can be queried or set via HTTP. The power outputs can also be switched manually. The continuous operation of the microcontroller is ensured by a 3.7V 500mAh LiPoly battery, the alarm sensor is provided by a non-rechargeable 6F22 9V battery.

Load capacity of outputs:

Function	Voltage	Maximal current	Overcurrent protection	Watched?
Status lamp outputs	12V DC	0.5A	fuse	no
Lamp output	230V AC	2 A		yes
Ventilator output	230V AC	2 A	overcurrent breaker	yes
Heater output	230V AC	10 A	breaker	yes

3. Schematic and PCB draws

The wiring diagrams of the device is shown in Annex 1, PCB draws are in Annex 2-4. You can download it as part of the complete documentation or in separate PDF, SVG and KiCAD formats from the developer/manufacturer's website. The Gerber files needed for production are included in the package.

4. Other draws and documents

Documentation package contents drilling draw in PDF and DXF format.

5. Terms of use

Hardware documentation can be modified and/or redistributed under the Creativ Commons 4.0 Attribution Non-Commercial (CC-BY-NC-4.0) License. You can read the full text of the license online. (Refer to Chapter III for references.)

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	4/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

6. Look of device

a) Manuals and connectors

- 1. Mains voltage signal light (white LED)
- 2. Auxiliary voltage signal light (white LED)
- 3. Activity signal light (blue LED)
- 4. Manual mode signal light (yellow LED)
- 5. General error signal light (red LED)
- 6. Protection error signal light (red LED)
- 7. Lamp on signal light (green LED)
- 8. Ventilator on signal light (green LED)
- 9. Heater on signal light (green LED)
- 10. Mains connectors (P1-3)

- 11. Console connector (P18)
- 12. Alarm sensor connectors (P13-14)
- 13. Status lamp connectors (P15-17)
- 14. Lamp connectors (P4-6)
- 15. Ventilator connectors (P7-9)
- 16. Heater connectors (P10-12)
- 17. Lamp manual mode switch (SW1)
- 18. Ventilator manual mode switch (SW2)
- 19. Heater manual mode switch (SW3)
- 20. Operation mode switch (SW4)

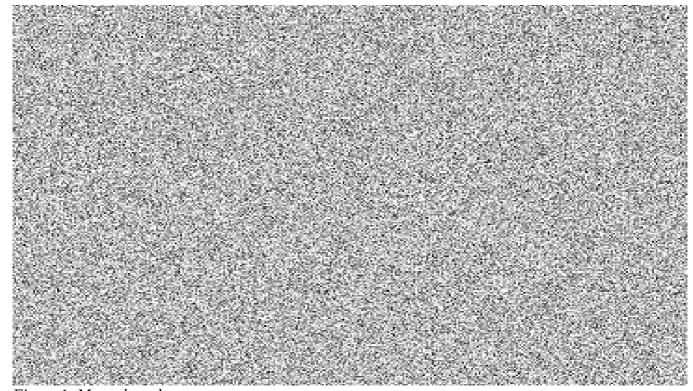


Figure 1: Manuals and connectors

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	5/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

b) Internal construction

- 1. Board of microcontroller
- 2. Battery of microcontroller (BT1)
- 3. Battery of alarm input (BT2)
- 4. 12V DC power supply
- 5. Fuse of power supply (F4)
- 6. Fuse of auxiliary voltage (F5)
- 7. Fuse of external status lamps (F6)
- 8. Relay of external status lamp (K1)
- 9. Relay of lamp output (K2)
- 10. Relay of ventilator output (K3)
- 11. Relay of heater output (K4)

- 12. Breaker of lamp output (F1)
- 13. Breaker of ventilator output (F2)
- 14. Breaker of heater output (F3)
- 15. Mains connectors (P1-3)
- 16. Console connector (P18)
- 17. Alarm sensor connectors (P13-14)
- 18. Status lamp connectors (P15-17)
- 19. Lamp connectors (P4-6)
- 20. Ventilator connectors (P7-9)
- 21. Heater connectors (P10-12)
- 22. Mounting holes

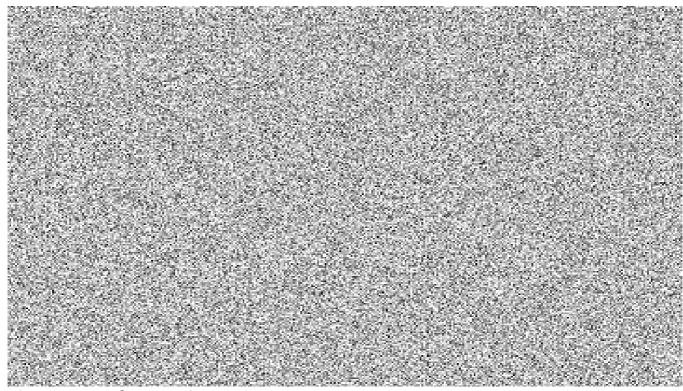


Figure 2: Internal construction

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	6/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

c) Pinout of connectors


sign	pin	function		voltage level
P1	1		L	230V AC
P2	1	Mains voltage input	N	
Р3	1		PE	
P4	1		L	230V AC
P5	1	Lamp output	N	
P6	1		PE	
P7	1		L	230V AC
P8	1	Ventilator output	N	
P9	1		PE	
P10	1		L	230V AC
P11	1	Heater output	N	
P12	1		PE	
P13	1			
P14	1	Contact of alarm sensor		+9/12V
P15	1	Green external status lamp	G	+12V
P16	1	Red external status lamp	R	+12V
P17	1	External status lamps common	С	
	2		RXD	+5V
P18	3	Serial console connector	TXD	+3.3V
	5		GND	GND
	1		L	230V AC
	2		N	
P19	3	Internal power supply module	PE	
	4		-V	GND
	5		+V	+12V

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	7/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

7. Downloadable documentation

The complete documentation of the hardware in the .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.) Name of package is: *mm6d-200612-1.0.tar.gz*.

Content of package - only important files:

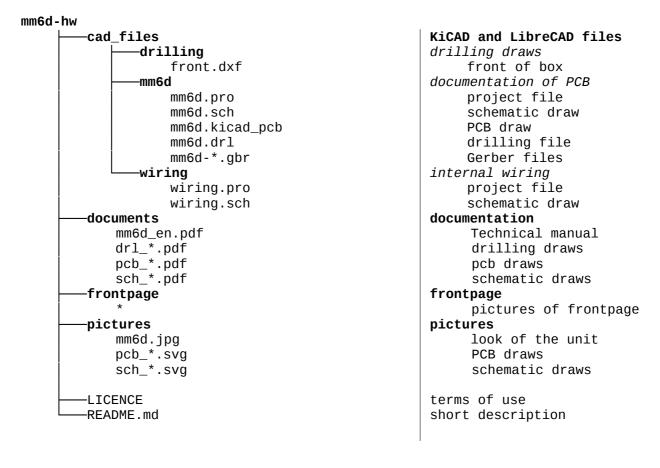

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	8/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

II. Software

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	9/25	
	Technical manual					
Na	ame:	Pozsár Zsolt			Date:	2020.06.12.

1. General description

The task of the program is to operate the hardware and communicate with the central controller.

The program displays initialization steps and error messages on the serial console.

When an HTTP request is received, the client's IP address and username argument are checked. If appropriate, read inputs or or turn outputs on/off. After displays the result on the web interface. Incoming requests are indicated by the flashing of the blue activity LED.

2. Setup

You can found source file of software in *source* directory. Before installing the program, you need to set these values:

```
// settings
const char* wifi_ssid = "";
const char* wifi_password = "";
const String www_username = "";
const String allowedaddress = "";
```

3. Installation

Use a micro USB cable and Arduino IDE software to install program to microcontroller.

4. Using the device

The device operates automatically does not require any human intervention.

a) Data set and retrieval via HTTP

An example for how to use argument:

http://192.168.1.21/set/lamp/off?uid=bob

URL of information and data pages:

URL	type	description	args.
http://ipaddress/	text/html	Start and information page	
http://ipaddress/version		Get software name and version	
http://ipaddress/get/all		Get all status	
http://ipaddress/get/alarm		Get status of alarm sensors	
http://ipaddress/get/manualswitch	text/plain	Get status of manual switch	
http://ipaddress/get/operationmode		Get operation mode	username
http://ipaddress/get/protection		Get status of overcurrent protection	
http://ipaddress/set/all/off		Switch off all outputs	

Titles:	MM6D Remote con	trolled switching device	Rev.:	200612	Pages:	10/25
	Technical manual					
Nam	: Pozsár Zsolt				Date:	2020.06.12.

URL	type	description	args.
http://ipaddress/set/alarm/off		Restore alarm input	
http://ipaddress/set/heater/off		Switch off heater	
http://ipaddress/set/heater/on		Switch on heater	
http://ipaddress/set/lamp/off	text/plain	Switch off lamp	username
http://ipaddress/set/lamp/on		Switch on lamp	
http://ipaddress/set/ventilator/off		Switch off ventilator	
http://ipaddress/set/ventilator/off		Switch on ventilator	

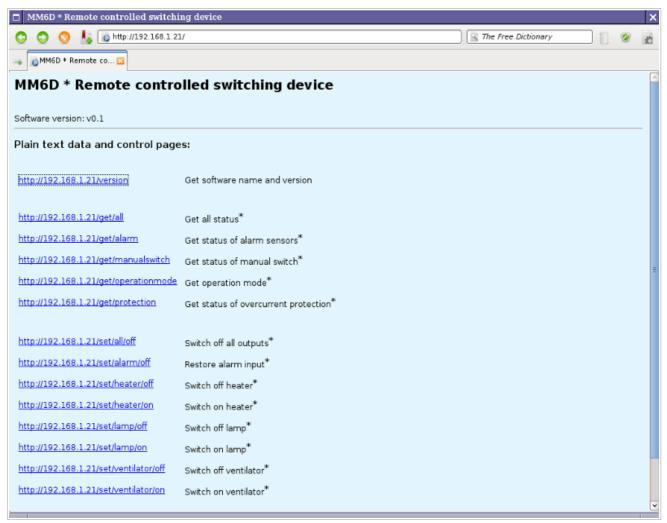


Figure 3: Start page

b) Connect to console via serial port

The console connector of the device and the RS-232 serial port of the computer must be connected by means of a level shifter adapter with a null modem cable. The level shifter adapter is

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	11/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

required due to the different voltages of the logic levels (0 V / 3.3 V and -12 V / + 12 V).

The console connector of the device and the USB port of the computer must be connected using an Adafruit 954, FTDI TTL-232R-RPI or similar 3.3V serial / USB cable.

Connection parameters

speed (baudrate): 115 200 bps

data bits: 8
parity bit: no
stop bit: 1
flow control: no

Connect via linux terminal

Name of ports (device files):

RS-232 serial port: /dev/ttyS0, /dev/ttyS1, ...

serial/USB converter: /dev/ttyUSB0, /dev/ttyUSB1, ...

Make sure you are a member of the dialout group:

username@localhost\$ id

If not, set up your group membership:

username@localhost\$ sudo usermod -a -G dialout username

Connect with GNU Screen program:

username@localhost\$ screen port_name 115200

Connect with Minicom program:

username@localhost\$ minicom -b 115200 -o -D port_name

Connect with Windows terminal (Putty)

Name of ports:

RS-232 serial port: COM1, COM2, ...

serial port/USB converter: variable, see the device manager

Select the serial connection mode and communication port, set the speed and start the connection.

5. Check operation

You can check operation of controller with a web brower, use index.html in *testpage* folder.

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	12/25
	Technical manual				
Name	Pozsár Zsolt			Date:	2020.06.12.

```
MM6D * Remote controlled switching device * v0.1
Copyright (C) 2020 Pozsar Zsolt copzsar.zsolt@szerafingomba.hu>
* Initializing GPIO ports...done.
* Connecting to wireless network............done.
device MAC address: EC:FA:BC:C1:0A:72
my IP address: 192.168.1.21
subnet mask: 255.255.255.0
gateway IP address: 192.168.1.1
* Starting webserver...done.
```

Figure 4: Serial console with messages

☐ MM6D * Remote controlled switching device Controller test page		×
💍 🖂 🐧 🖟 👔 file:///home/pozsarzs/Git/mm6d/testpage/index.html	The Free Dictionary	ğ
→ GMM6D * Remote co □		
Controller IP address of controller: [192.168.1.21 Username: [admin]		(<
Get controller's data O Get name and version of controller Submit		
Alarm O Get alarm status Restore alarm status Submit		=
Get status Get all status Get status of operation mode switch Get status of manual mode Get status of overcurrent protection Submit		
Turn off/on outputs Switch off all outputs Switch off lamp Switch on lamp		×
* Alarm input is restored.		\(\frac{1}{2}\)

Figure 5: Test page

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	13/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

6. Terms of use

This program is free software: you can redistribute it and/or modify it under the terms of the European Union Public License 1.1 version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.


You can read the full text of the license online. (Refer to Chapter III for references.)

7. Downloadable software package

The software package in .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.)

Name of package is: *mm6d-sw-0.1.tar.gz*.

Content of package - only important files:

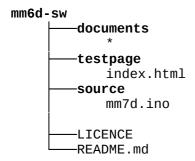

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	14/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

III. Related links

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	15/25	
	:5.	Technical manual				
Nam	ıe:	Pozsár Zsolt			Date:	2020.06.12.

1. Hardware and software

Full package http://www.szerafingomba.hu/equipments/mm6d/mm6d-200612-0.1-1.0.tar.gz

Download from Github http://github.com/pozsarzs/mm6d.git

Technical manual http://www.szerafingomba.hu/equipments/mm6d/technical-manual-200612-0.1-1.0-en.pdf

Test page http://szerafingomba.hu/equipments/mm6d/testpage/

Schematic and PCB draws (PDF):

Schematics http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-1.pdf

http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-2.pdf

PCB solder side http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-sold.pdf

PCB component side http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-comp.pdf

PCB silkscreen http://www.szerafingomba.hu/equipments/mm6d/pcb mm6d-silk.pdf

2. Terms of use

CC-BY-NC-4.0 https://creativecommons.org/licenses/by-nc/4.0/legalcode

CC-BY-NC-4.0 https://creativecommons.org/licenses/by-nc/4.0/

EUPL v1.2 https://eupl.eu/1.2/en/

3. Developer and manufacturer

Homepage https://www.szerafingomba.hu

E-mail <u>info@szerafingomba.hu</u>

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	16/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

IV. Annexes

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	17/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

Content


- 1. Error messages and signs
- 2. Internal wiring
- 3. Schematic of printed circuit board
- 4. PCB solder side
- 5. PCB component side
- 6. PCB silkscren

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	18/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.


Sign	Message	Web	Console	RED light	Sound
E01	Control timeout error!	no	yes	yes+ BLUE	no
E02	Overcurrent protection error!	no	yes	yes	beep
E03	Authentication error!	yes	yes	no	2x beep
E04	Not allowed client IP address!	yes	yes	no	3 x beep
E05	Page not found!	yes	yes	no	no

Annex 1: Error messages and signs


Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	19/25
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

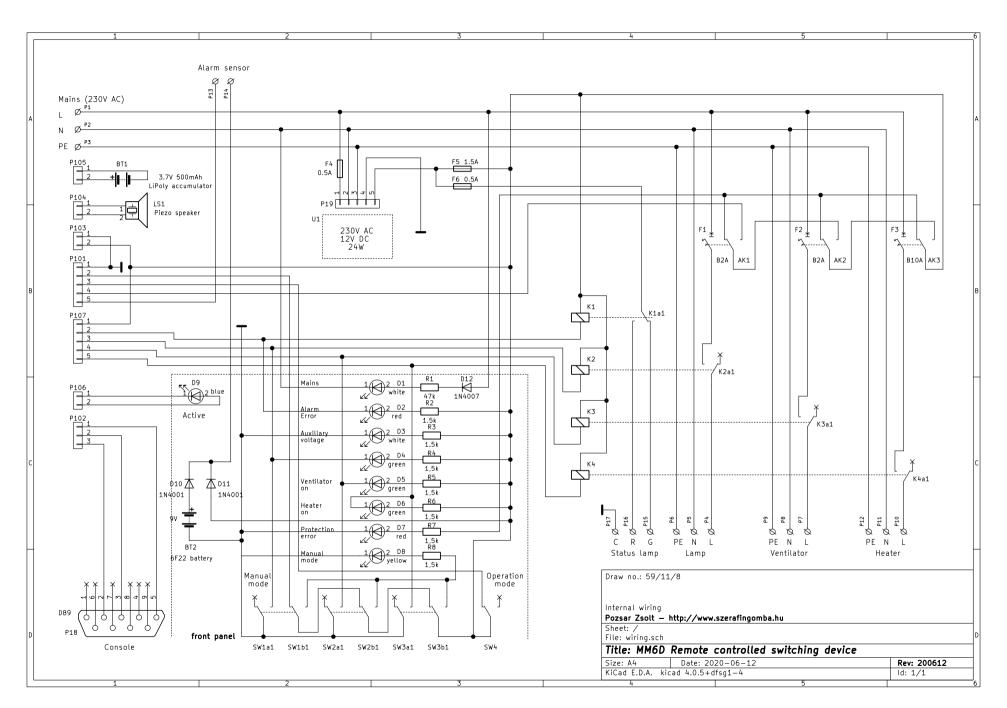


Annex 2: Internal wiring

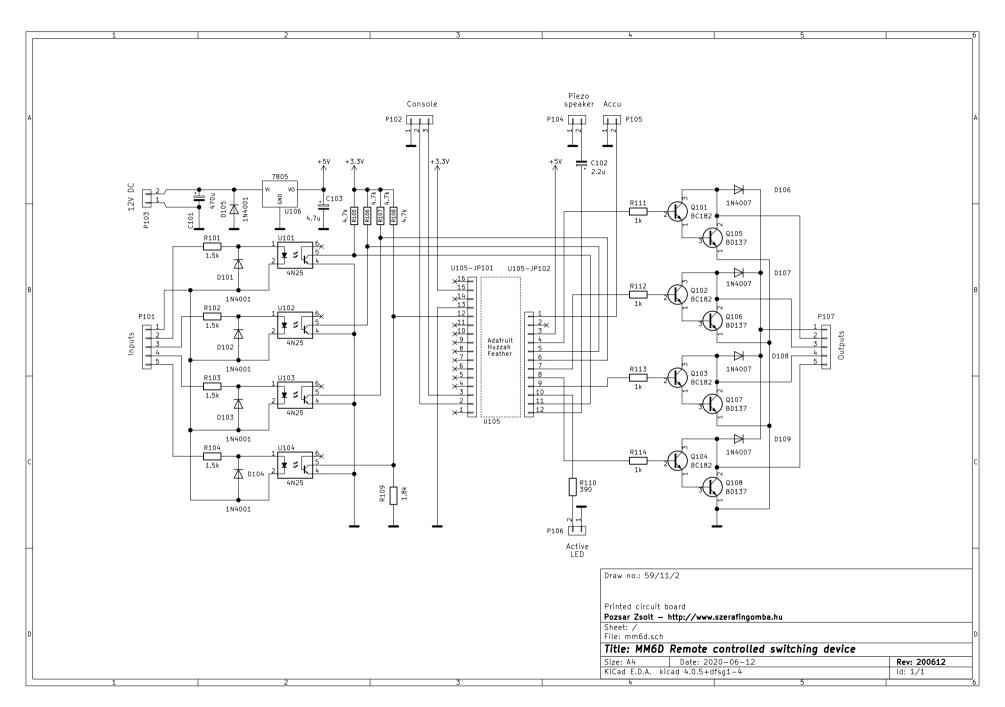


Annex 3: Schematic of printed circuit board

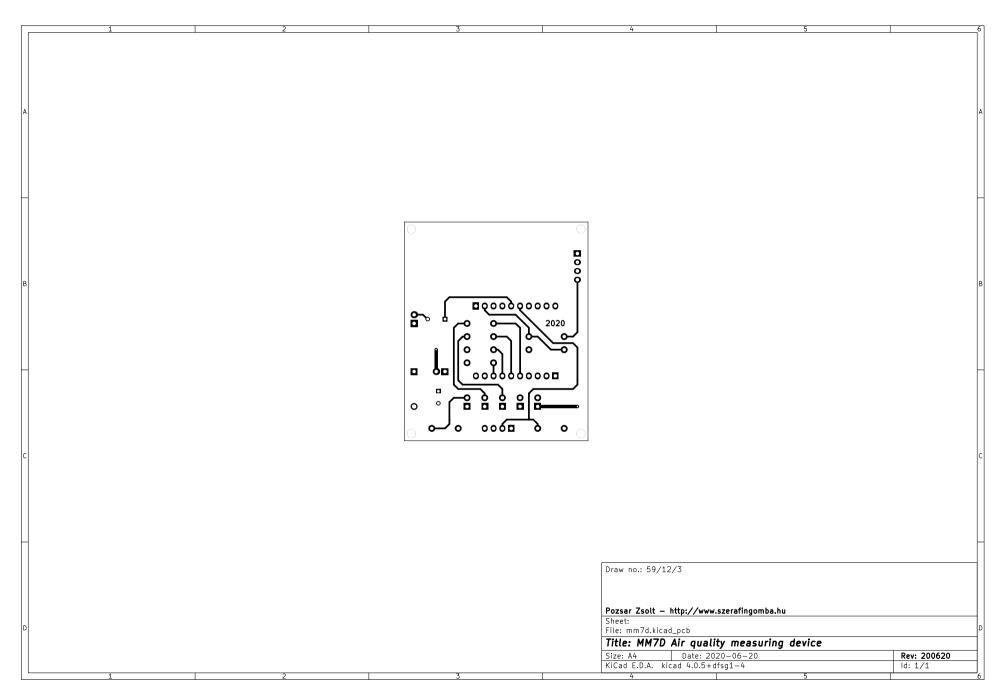

Annex 4: PCB solder side

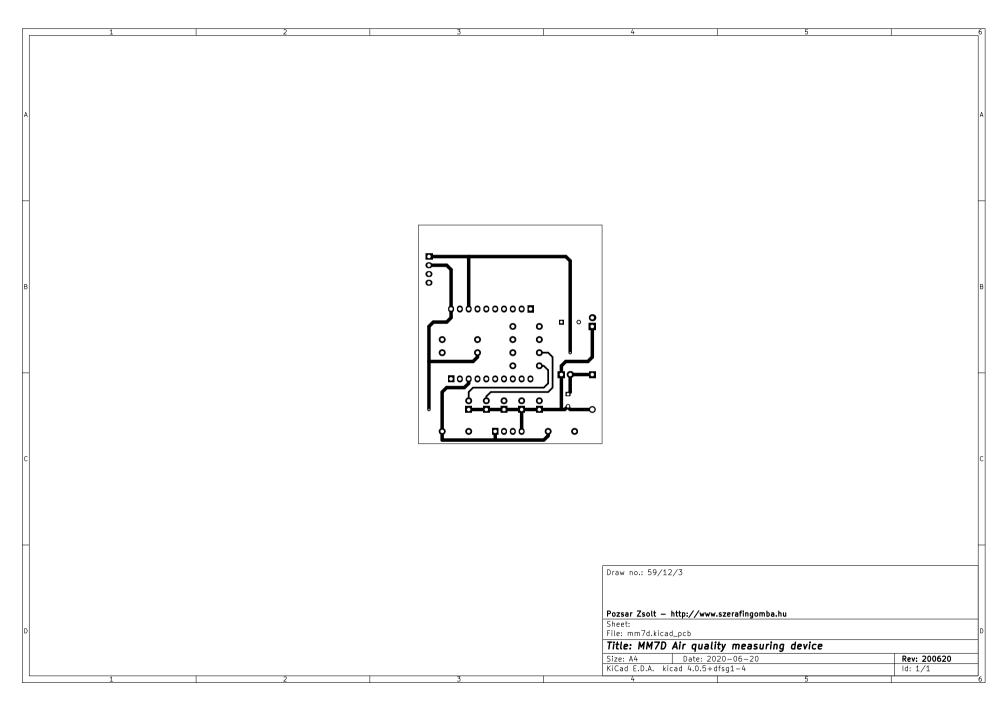

Annex 5: PCB component side

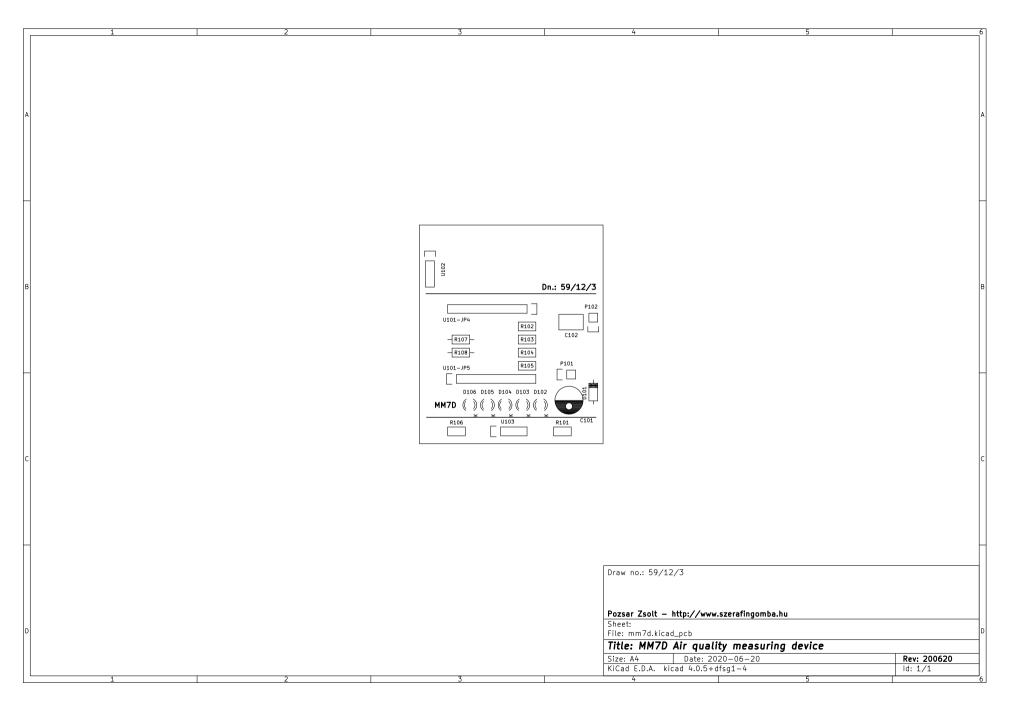

Annex 6: PCB silkscreen