


MM6D Remote controlled switching device

Technical manual

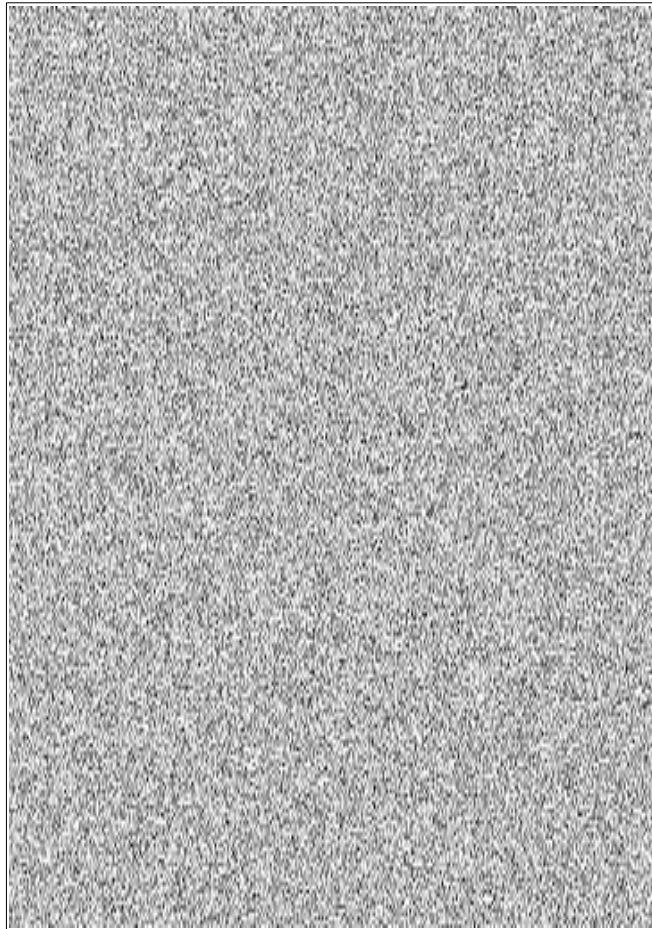

Hardware version: v200612

Software version: v0.1

Technical manual version: v1.0

Issue date: 2020.06.12.

Draw number: 59/11/1

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	1/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

Content

I. Hardware.....	3
1. Technical data.....	4
2. General description.....	4
3. Schematic and PCB draws.....	4
4. Other draws and documents.....	4
5. Terms of use.....	4
6. Look of device.....	5
a) Manuals and connectors.....	5
b) Internal construction.....	6
c) Pinout of connectors.....	7
7. Downloadable documentation.....	8
II. Software.....	9
1. General description.....	10
2. Setup.....	10
3. Installation.....	10
4. Using the device.....	10
a) Data set and retrieval via HTTP.....	10
b) Connect to console via serial port.....	11
5. Check operation.....	12
6. Terms of use.....	14
7. Downloadable software package.....	14
III. Related links.....	15
1. Hardware and software.....	16
2. Terms of use.....	16
3. Developer and manufacturer.....	16
IV. Annexes.....	17
Content.....	18

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	2/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

I. Hardware

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	3/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

1. Technical data

Supply voltage:	230V AC	IP protection:	IP 20
Auxiliary voltage:	12V DC	Mass of cover:	termoplast (ABS)
Supply current:	max. ?A	Communication:	Wireless LAN, TTL 3.3V serial port
Isolation class:	Class I	Get/set data:	via HTTP
Mechanical size:	71 x 71 x 27 mm	Administration:	via serial connection

2. General description

The device has four 12V DC inputs separated by an optocoupler and four relay outputs. These have a predefined function. Their status can be queried or set via HTTP. The power outputs can also be switched manually. The continuous operation of the microcontroller is ensured by a 3.7V 500mAh LiPoly battery, the alarm sensor is provided by a non-rechargeable 6F22 9V battery.

Load capacity of outputs:

Function	Voltage	Maximal current	Overcurrent protection	Watched?
Status lamp outputs	12V DC	0.5A	fuse	no
Lamp output	230V AC	2 A	overcurrent breaker	yes
Ventilator output	230V AC	2 A		yes
Heater output	230V AC	10 A		yes

3. Schematic and PCB draws

The wiring diagrams of the device is shown in Annex 1, PCB draws are in Annex 2-4. You can download it as part of the complete documentation or in separate PDF, SVG and KiCAD formats from the developer/manufacturer's website. The Gerber files needed for production are included in the package.

4. Other draws and documents

Documentation package contents drilling draws in PDF and DXF format.

5. Terms of use

Hardware documentation can be modified and/or redistributed under the Creative Commons 4.0 Attribution Non-Commercial (CC-BY-NC-4.0) License. You can read the full text of the license online. (Refer to Chapter III for references.)

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	4/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

6. Look of device

a) Manuals and connectors

1. Mains voltage signal light (white LED)
2. Auxiliary voltage signal light (white LED)
3. Activity signal light (blue LED)
4. Manual mode signal light (yellow LED)
5. General error signal light (red LED)
6. Protection error signal light (red LED)
7. Lamp on signal light (green LED)
8. Ventilator on signal light (green LED)
9. Heater on signal light (green LED)
10. Mains connectors (P1-3)
11. Console connector (P4)
12. Alarm sensor connectors (P5-6)
13. Status lamp connectors (P7-9)
14. Lamp connectors (P10-12)
15. Ventilator connectors (P13-15)
16. Heater connectors (P16-18)
17. Lamp manual mode switch (SW1)
18. Ventilator manual mode switch (SW2)
19. Heater manual mode switch (SW3)
20. Operation mode switch (SW4)

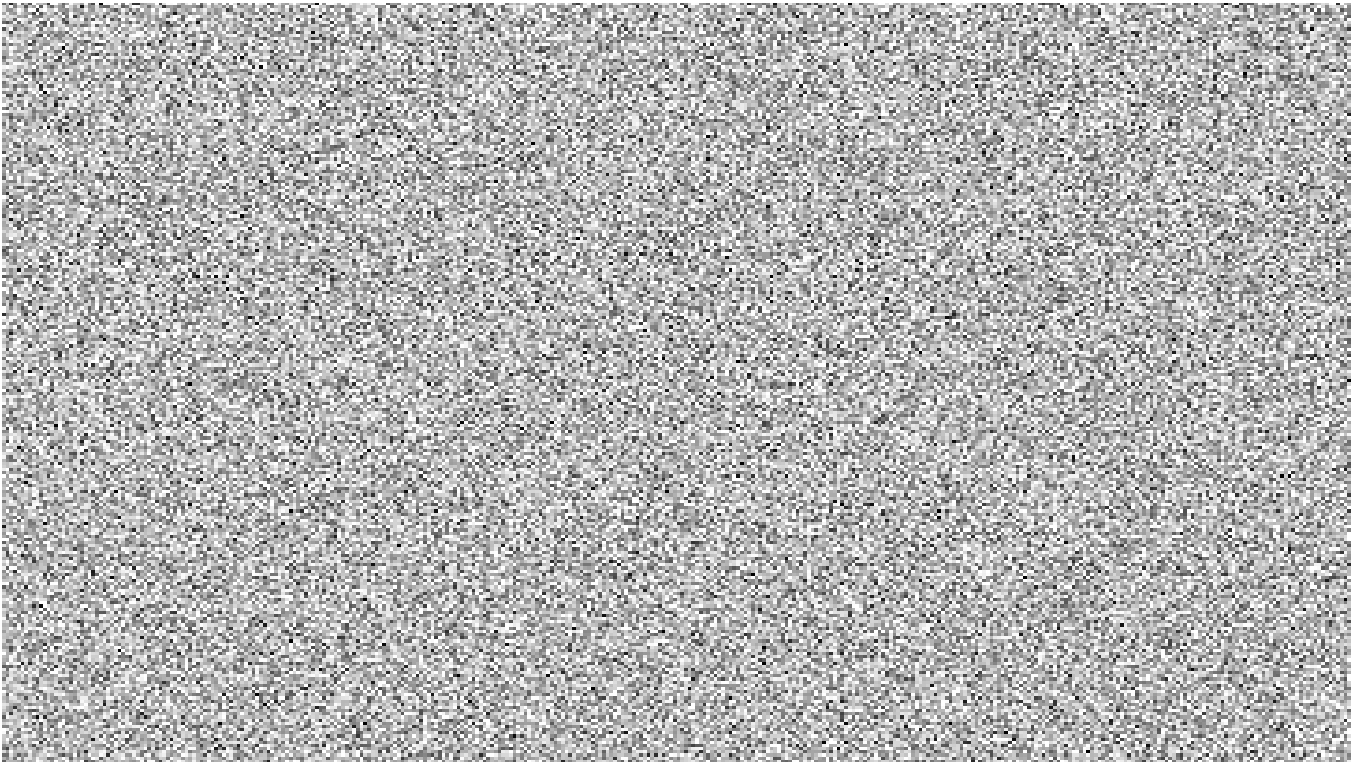


Figure 1: Manuals and connectors

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	5/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

b) Internal construction

1. Board of microcontroller
2. Battery of microcontroller (BT1)
3. Battery of alarm input (BT2)
4. Auxiliary power supply
5. Board power supply
6. Fuse of alarm sensor (F2)
7. Fuse of power supply (F1)
8. Fuse of auxiliary voltage (F2)
9. Fuse of external status lamps (F3)
10. Relay of external status lamp (K1)
11. Relay of lamp output (K2)
12. Relay of ventilator output (K3)
13. Relay of heater output (K4)
14. Breaker of lamp output (F6)
15. Breaker of ventilator output (F7)
16. Breaker of heater output (F8)
17. Mains connectors (P1-3)
18. Console connector (P4)
19. Alarm sensor connectors (P5-6)
20. Status lamp connectors (P7-9)
21. Lamp connectors (P10-12)
22. Ventilator connectors (P13-15)
23. Heater connectors (P16-18)
24. Mounting holes

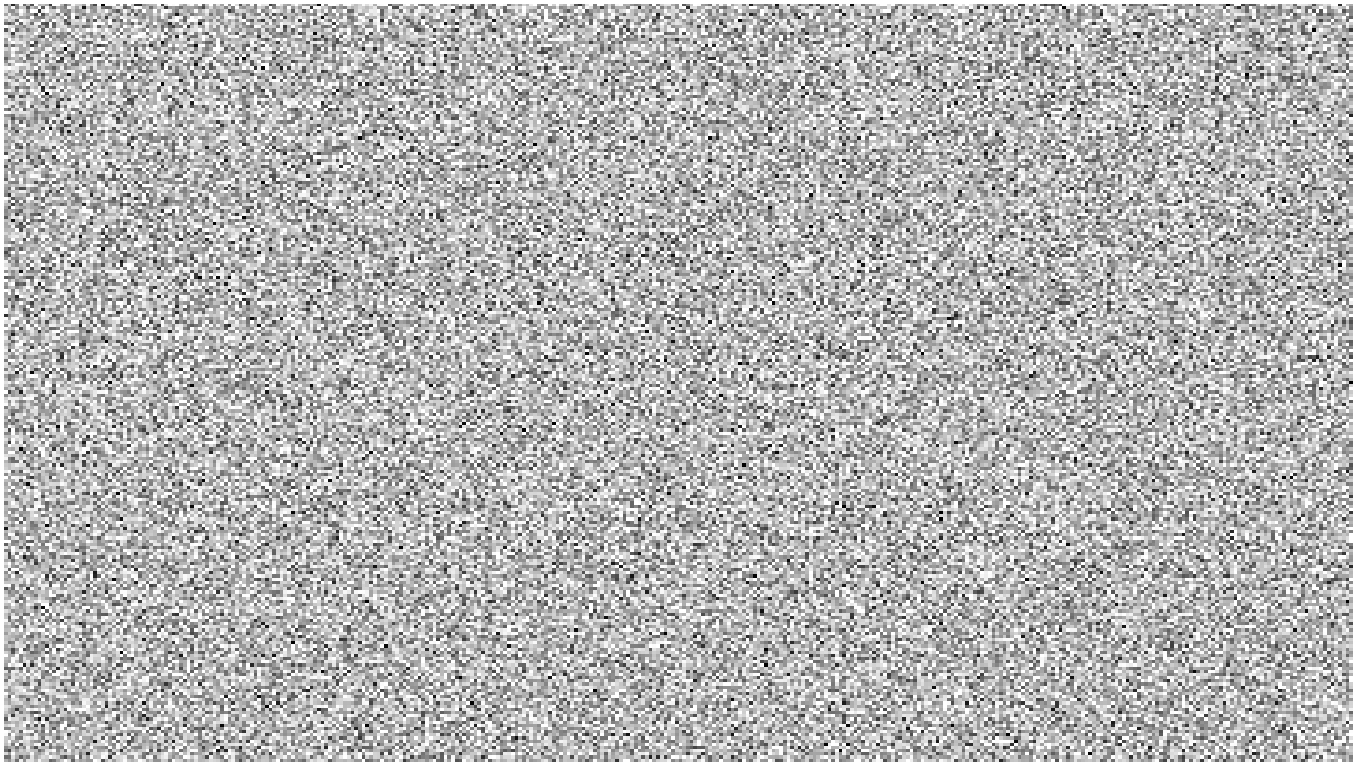


Figure 2: Internal construction

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	6/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

c) Pinout of connectors

[illegible]

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	7/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

7. Downloadable documentation

The complete documentation of the hardware in the .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.) Name of package is: *mm6d-200612-1.0.tar.gz*.

Content of package - only important files:

mm6d-hw

- cad_files**
 - drilling**
 - front.dxf
 - mountingplate.dxf
 - mm6d**
 - mm6d.pro
 - mm6d.sch
 - mm6d.kicad_pcb
 - mm6d.drl
 - mm6d-*.gbr
 - wiring**
 - wiring.pro
 - wiring.sch
- documents**
 - mm6d_en.pdf
 - drl_*.pdf
 - pcb_*.pdf
 - sch_*.pdf
- frontpage**
 - *
- pictures**
 - mm6d.jpg
 - pcb_*.svg
 - sch_*.svg
- LICENCE
- README.md

KiCAD and LibreCAD files

- drilling draws*
 - front of box
 - mounting plate
- documentation of PCB*
 - project file
 - schematic draw
 - PCB draw
 - drilling file
 - Gerber files
- internal wiring*
 - project file
 - schematic draw
- documentation**
 - Technical manual
 - drilling draws
 - pcb draws
 - schematic draws
- frontpage**
 - pictures of frontpage
- pictures**
 - look of the unit
 - PCB draws
 - schematic draws
- terms of use
- short description

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	8/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

II. Software

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	9/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

1. General description

The task of the program is to operate the hardware and communicate with the central controller.

The program displays initialization steps and error messages on the serial console.

When an HTTP request is received, the client's IP address and username argument are checked. If appropriate, read inputs or or turn outputs on/off. After displays the result on the web interface. Incoming requests are indicated by the flashing of the blue activity LED.

2. Setup

You can found source file of software in *source* directory. Before installing the program, you need to set these values:

```
// settings
const char* wifi_ssid      = "";
const char* wifi_password  = "";
const String www_username  = "";
const String allowedaddress = "";
```

3. Installation

Use a micro USB cable and Arduino IDE software to install program to microcontroller.

4. Using the device

The device operates automatically does not require any human intervention.

a) Data set and retrieval via HTTP

An example for how to use argument:

<http://192.168.1.21/set/lamp/off?uid=bob>

URL of information and data pages:

URL	type	description	args.
http://ipaddress/	text/html	Start and information page	
http://ipaddress/version	text/plain	Get software name and version	username
http://ipaddress/get/all		Get all status	
http://ipaddress/get/alarm		Get status of alarm sensors	
http://ipaddress/get/manualswitch		Get status of manual switch	
http://ipaddress/get/operationmode		Get operation mode	
http://ipaddress/get/protection		Get status of overcurrent protection	
http://ipaddress/set/all/off		Switch off all outputs	

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	10/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

URL	type	description	args.
http://ipaddress/set/alarm/off	text/plain	Restore alarm input	username
http://ipaddress/set/heater/off		Switch off heater	
http://ipaddress/set/heater/on		Switch on heater	
http://ipaddress/set/lamp/off		Switch off lamp	
http://ipaddress/set/lamp/on		Switch on lamp	
http://ipaddress/set/ventilator/off		Switch off ventilator	
http://ipaddress/set/ventilator/on		Switch on ventilator	

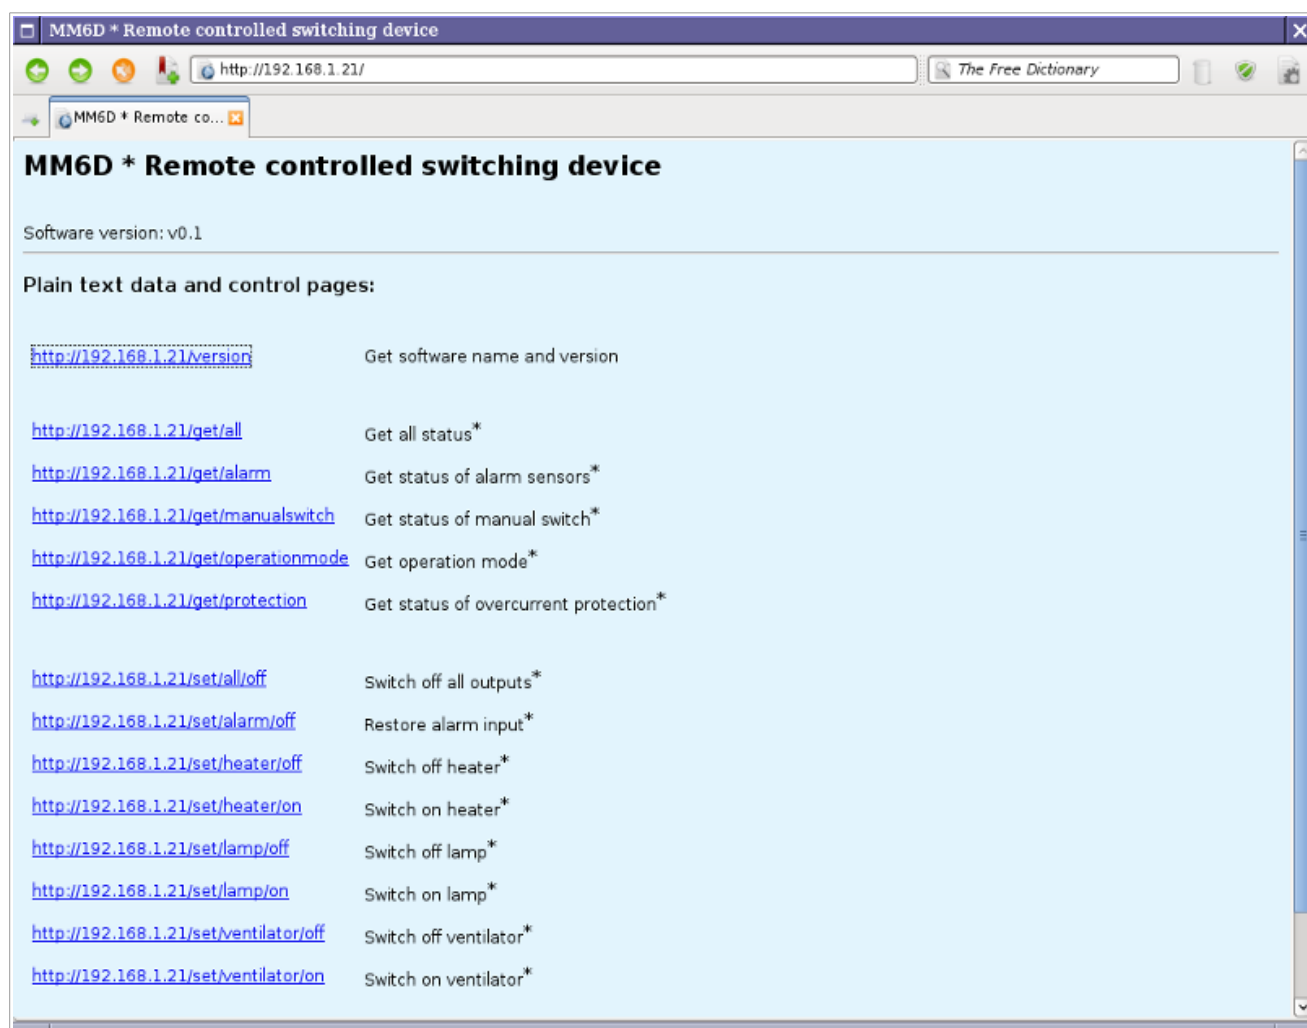


Figure 3: Start page

b) Connect to console via serial port

The console connector of the device and the RS-232 serial port of the computer must be connected by means of a level shifter adapter with a null modem cable. The level shifter adapter is

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	11/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

required due to the different voltages of the logic levels (0 V / 3.3 V and -12 V / + 12 V).

The console connector of the device and the USB port of the computer must be connected using an Adafruit 954, FTDI TTL-232R-RPI or similar 3.3V serial / USB cable.

Connection parameters

speed (baudrate): 115 200 bps
data bits: 8
parity bit: no
stop bit: 1
flow control: no

Connect via linux terminal

Name of ports (device files):

RS-232 serial port: /dev/ttyS0, /dev/ttyS1, ...
serial/USB converter: /dev/ttyUSB0, /dev/ttyUSB1, ...

Make sure you are a member of the dialout group:

```
username@localhost$ id
```

If not, set up your group membership:

```
username@localhost$ sudo usermod -a -G dialout username
```

Connect with GNU Screen program:

```
username@localhost$ screen port_name 115200
```

Connect with Minicom program:

```
username@localhost$ minicom -b 115200 -o -D port_name
```

Connect with Windows terminal (Putty)

Name of ports:

RS-232 serial port: COM1, COM2, ...
serial port/USB converter: variable, see the device manager

Select the serial connection mode and communication port, set the speed and start the connection.

5. Check operation

You can check operation of controller with a web browser, use index.html in *testpage* folder.

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	12/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

```

Bash
MM6D * Remote controlled switching device * v0.1
Copyright (C) 2020 Pozsar Zsolt <pozsar.zsolt@szerafingomba.hu>
* Initializing GPIO ports...done.
* Connecting to wireless network.....done.
  device MAC address: EC:FA:BC:C1:0A:72
  my IP address:      192.168.1.21
  subnet mask:       255.255.255.0
  gateway IP address: 192.168.1.1
* Starting webserver...done.

```

Figure 4: Serial console with messages

Figure 5: Test page

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	13/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

6. Terms of use

This program is free software: you can redistribute it and/or modify it under the terms of the European Union Public License 1.1 version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

You can read the full text of the license online. (Refer to Chapter III for references.)

7. Downloadable software package

The software package in .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.)

Name of package is: *mm6d-sw-0.1.tar.gz*.

Content of package - only important files:

mm6d-sw	
— documents	documentation
*	
— libraries	used 3rd-party libraries
clone	clone with git
*.tar.gz	library in archive file
— testpage	test page
index.html	startpage
— source	source code
mm7d.ino	source code
— LICENCE	terms of use
— README.md	short description

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	14/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

III. Related links

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	15/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

1. Hardware and software

Full package	http://www.szerafingomba.hu/equipments/mm6d/mm6d-200612-0.1-1.0.tar.gz
Download from Github	http://github.com/pozsarzs/mm6d-sw.git http://github.com/pozsarzs/mm6d-hw.git
Technical manual	http://www.szerafingomba.hu/equipments/mm6d/technical-manual-200612-0.1-1.0-en.pdf

Schematic and PCB draws (PDF):

Wiring	http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-1.pdf
Display board schematic	http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-2.pdf
Main board schematic	http://www.szerafingomba.hu/equipments/mm6d/sch_mm6d-3.pdf
Display board solder side	http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-2-sold.pdf
Display board silkscreen	http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-2-silk.pdf
Main board solder side	http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-3-sold.pdf
Main board comp. side	http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-3-comp.pdf
Main board silkscreen	http://www.szerafingomba.hu/equipments/mm6d/pcb_mm6d-3-silk.pdf

2. Terms of use

CC-BY-NC-4.0	https://creativecommons.org/licenses/by-nc/4.0/legalcode
CC-BY-NC-4.0	https://creativecommons.org/licenses/by-nc/4.0/
EUPL v1.2	https://eupl.eu/1.2/en/

3. Developer and manufacturer

Homepage	https://www.szerafingomba.hu
E-mail	info@szerafingomba.hu

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	16/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

IV. Annexes

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	17/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

Content


1. Error messages and signs
2. Color marking of wires
3. Internal wiring
4. Schematic of display board
5. Schematic of main board
6. Solder side of display board
7. Silkscreen of display board
8. Solder side of main board
9. Component side of main board
10. Silkscreen of main board

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	18/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

Colour	Sign	Voltage level	Type	Means
black	0V			Common point of extra-low voltage for power supply. Not connected to N and PE wires.
blue	N			Neutral line of low voltage mains.
brown	L	LV	AC	Live line of low voltage mains.
green	~8V ~12V	ELV	AC	Extra low-voltage for power supply.
green-yellow	PE			Protection ground line low voltage mains.
purple	RX TX	ELV		Serial communication wires.
red	+9V +12V	ELV	DC	Extra low-voltage for power supply.
white		ELV		Other extra low-voltage wires.


Annex 2: Color marking of wires

Titles:	MM6D Remote controlled switching device	Rev.:	200612	Pages:	20/28
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.12.

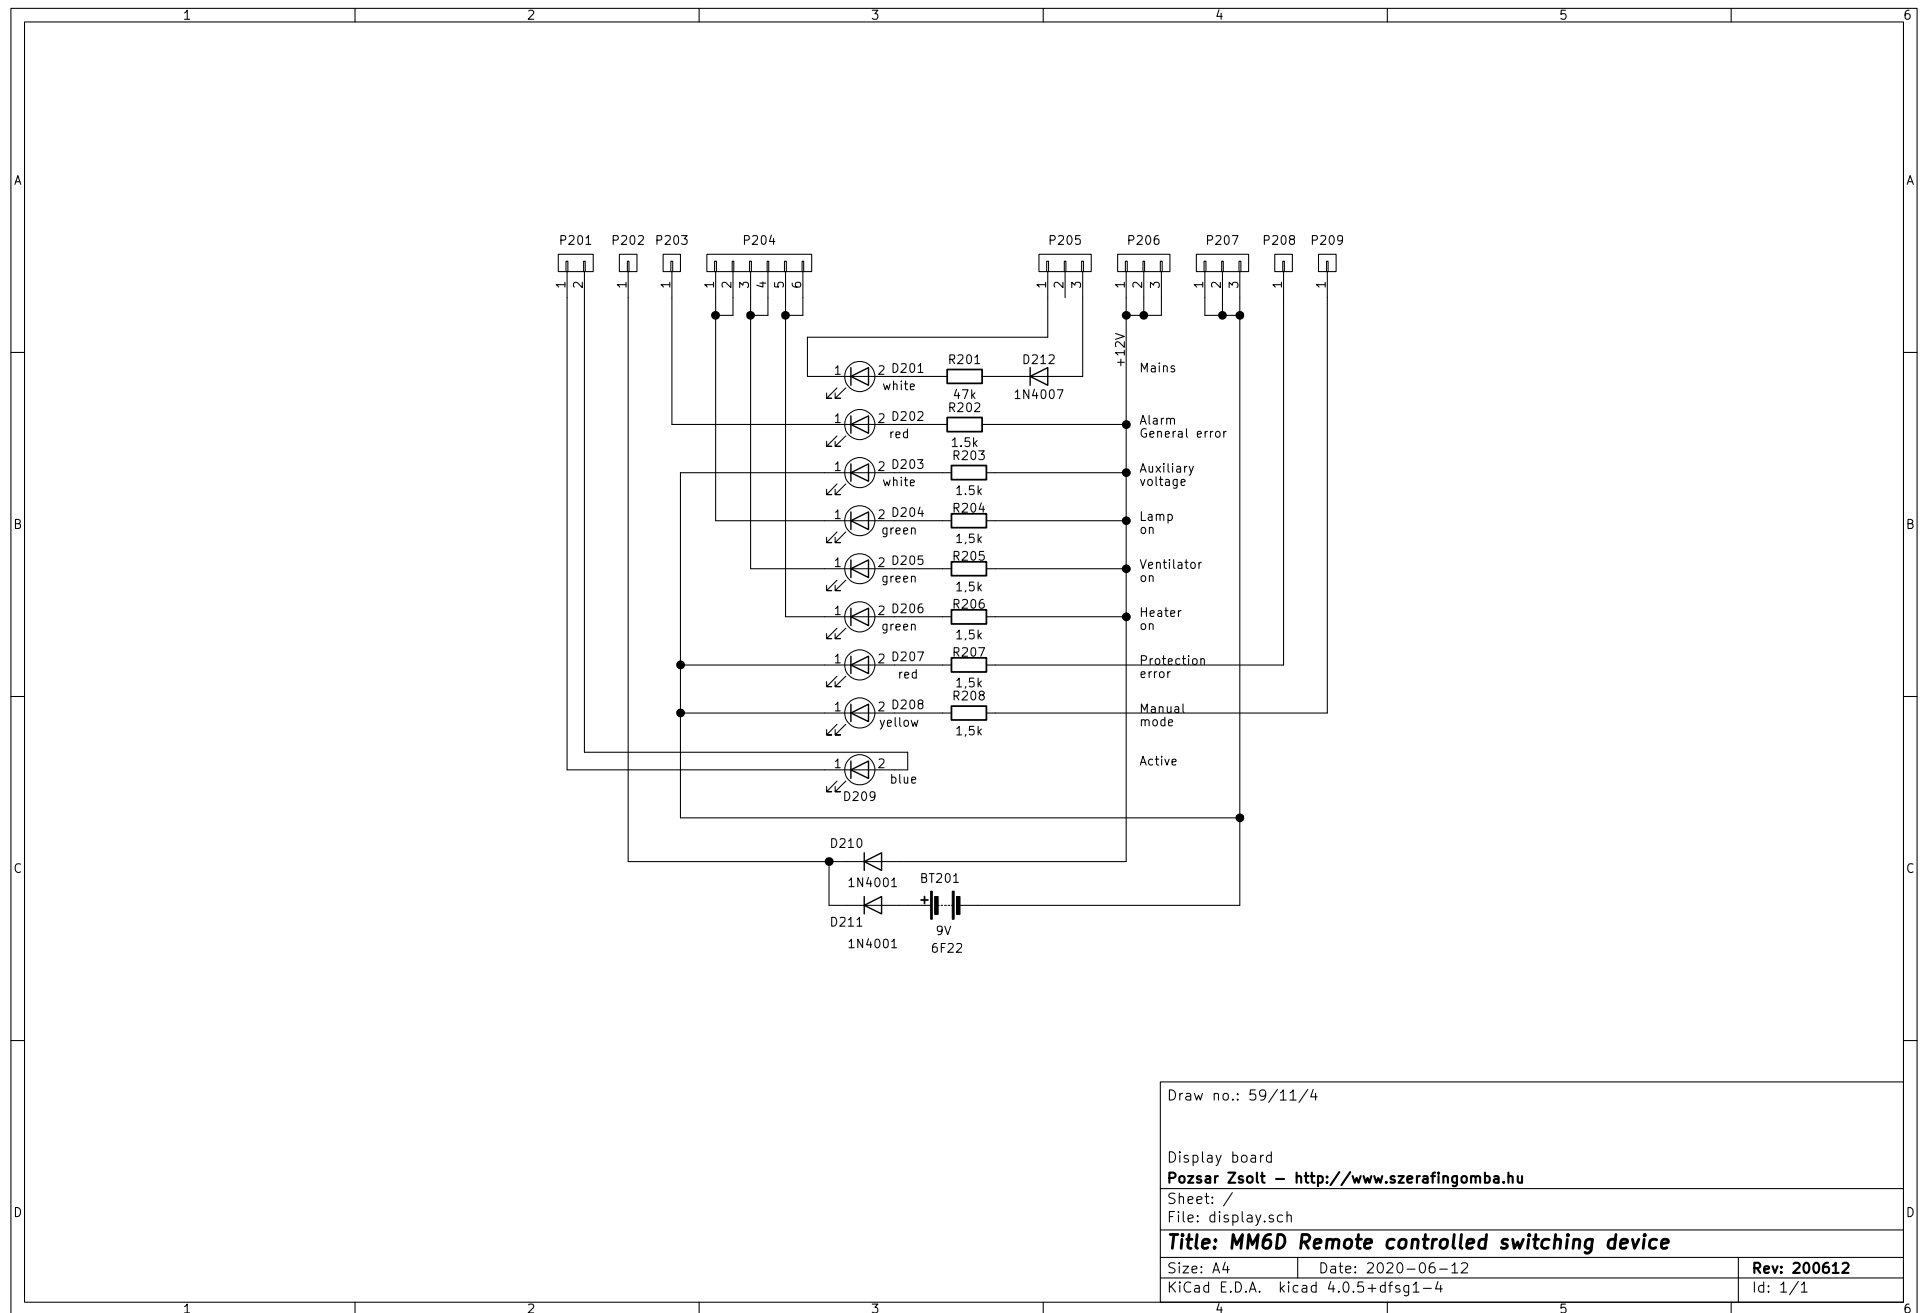


Draw no.: 59/11/4		
Display board		
Pozsar Zsolt – http://www.szerafingomba.hu		
Sheet: /		
File: display.sch		
Title: MM6D Remote controlled switching device		
Size: A4	Date: 2020-06-12	Rev: 200612
KiCad E.D.A. kicad 4.0.5+dfsg1-4		Id: 1/1


Annex 4: Schematic of display board

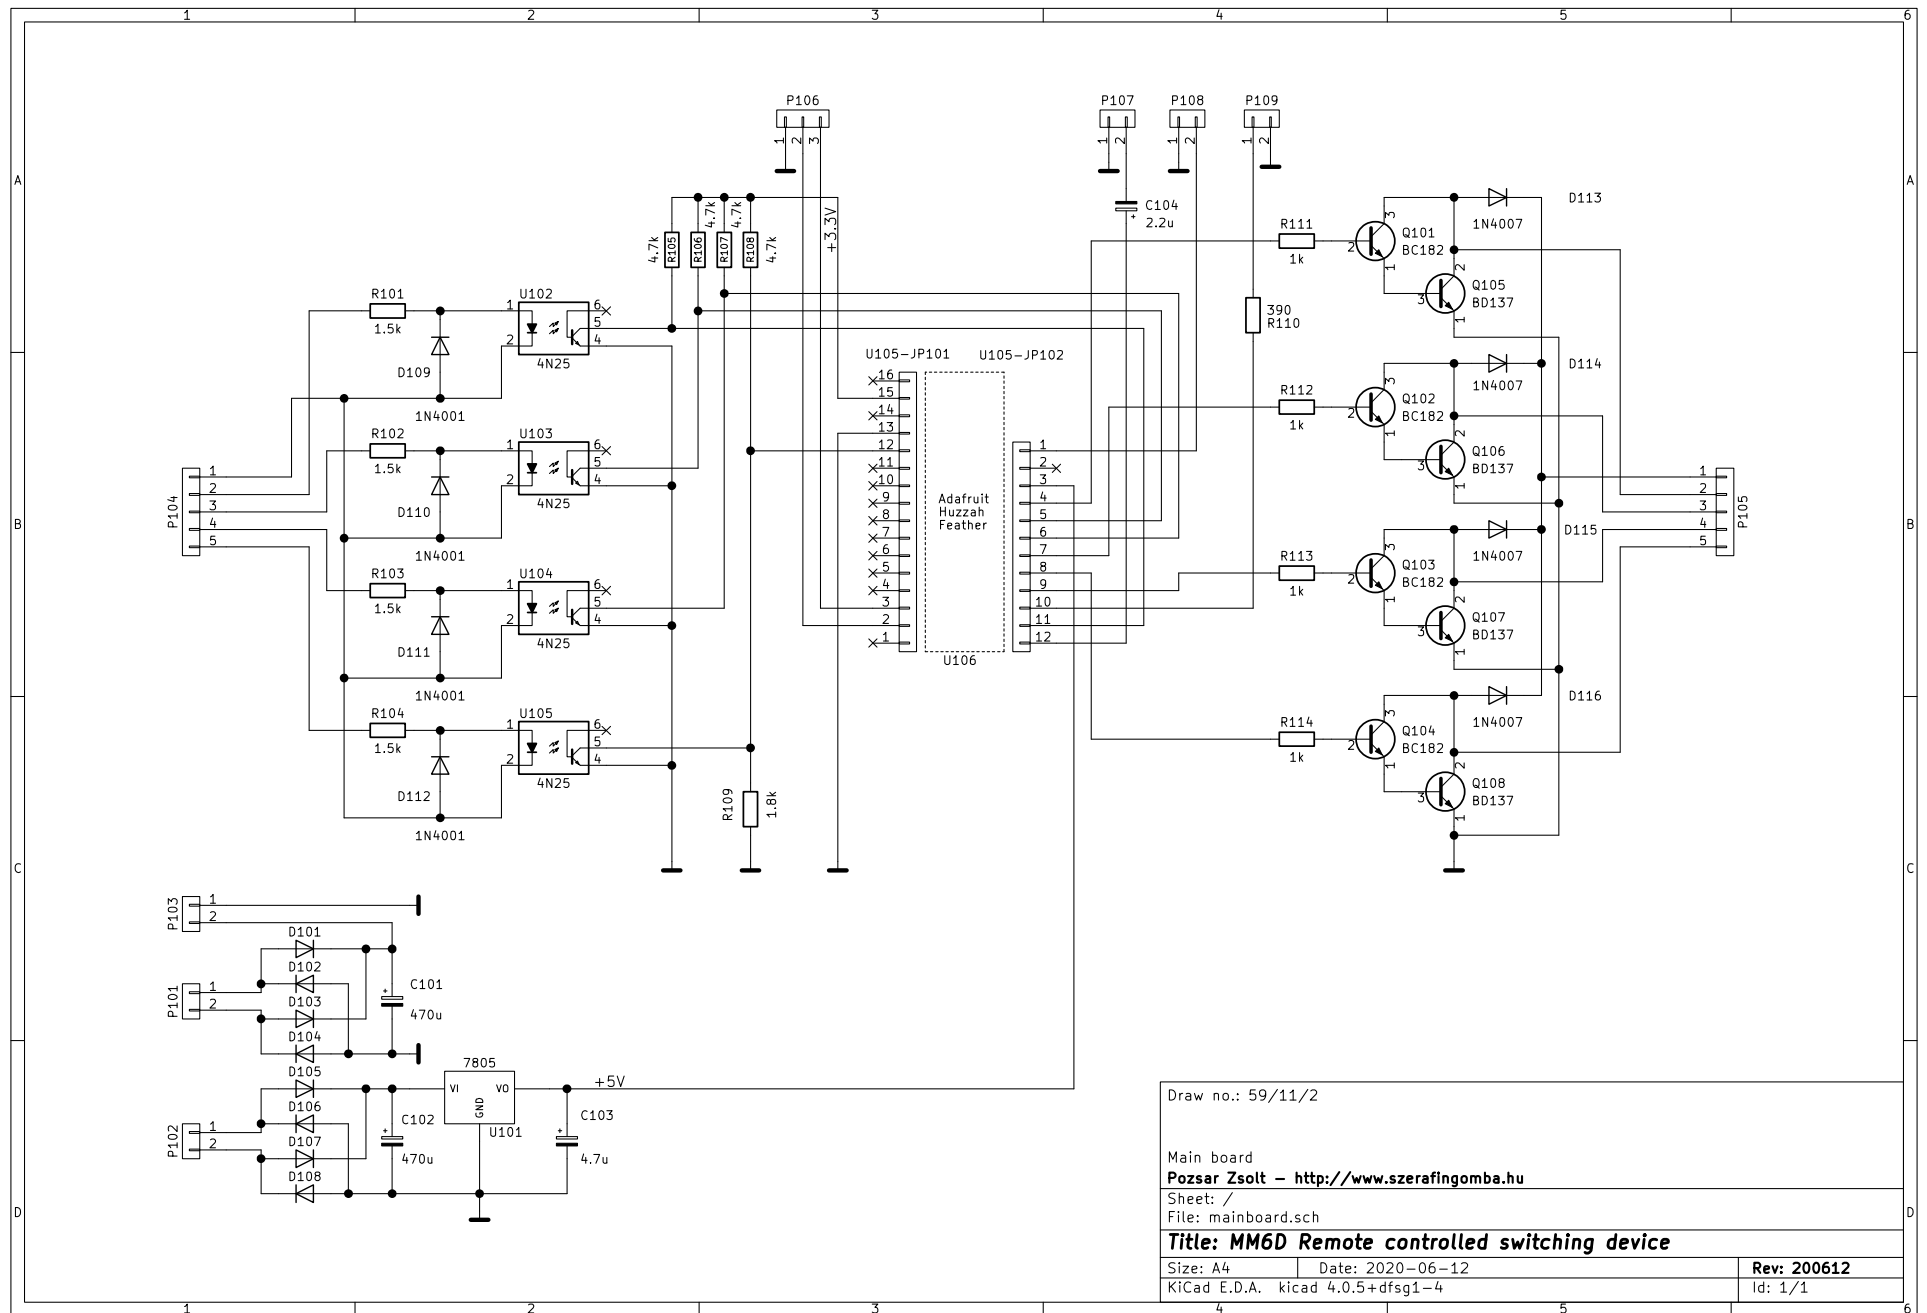


Annex 5: Schematic of main board

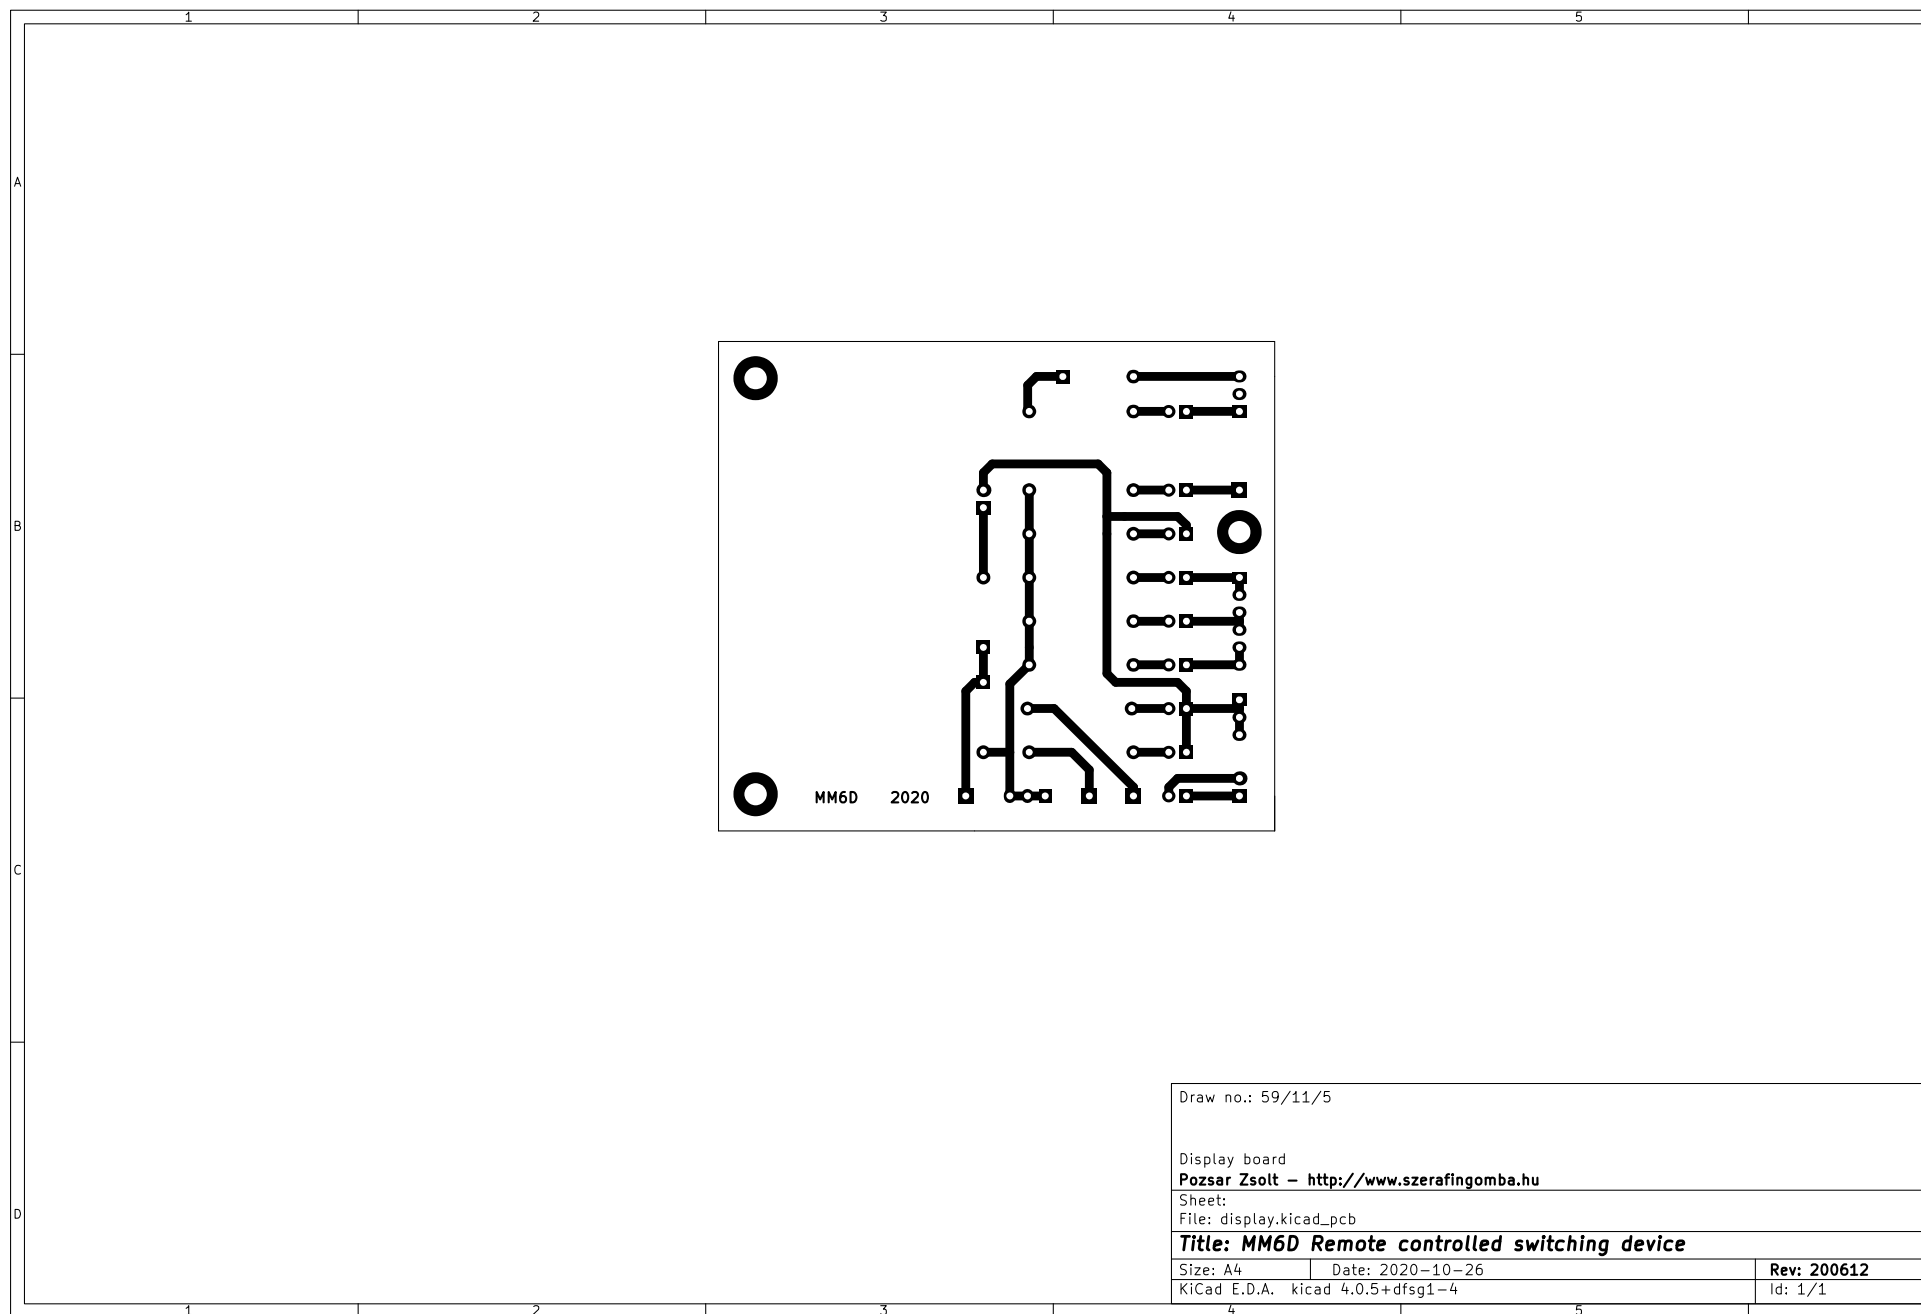


Annex 6: Solder side of display board

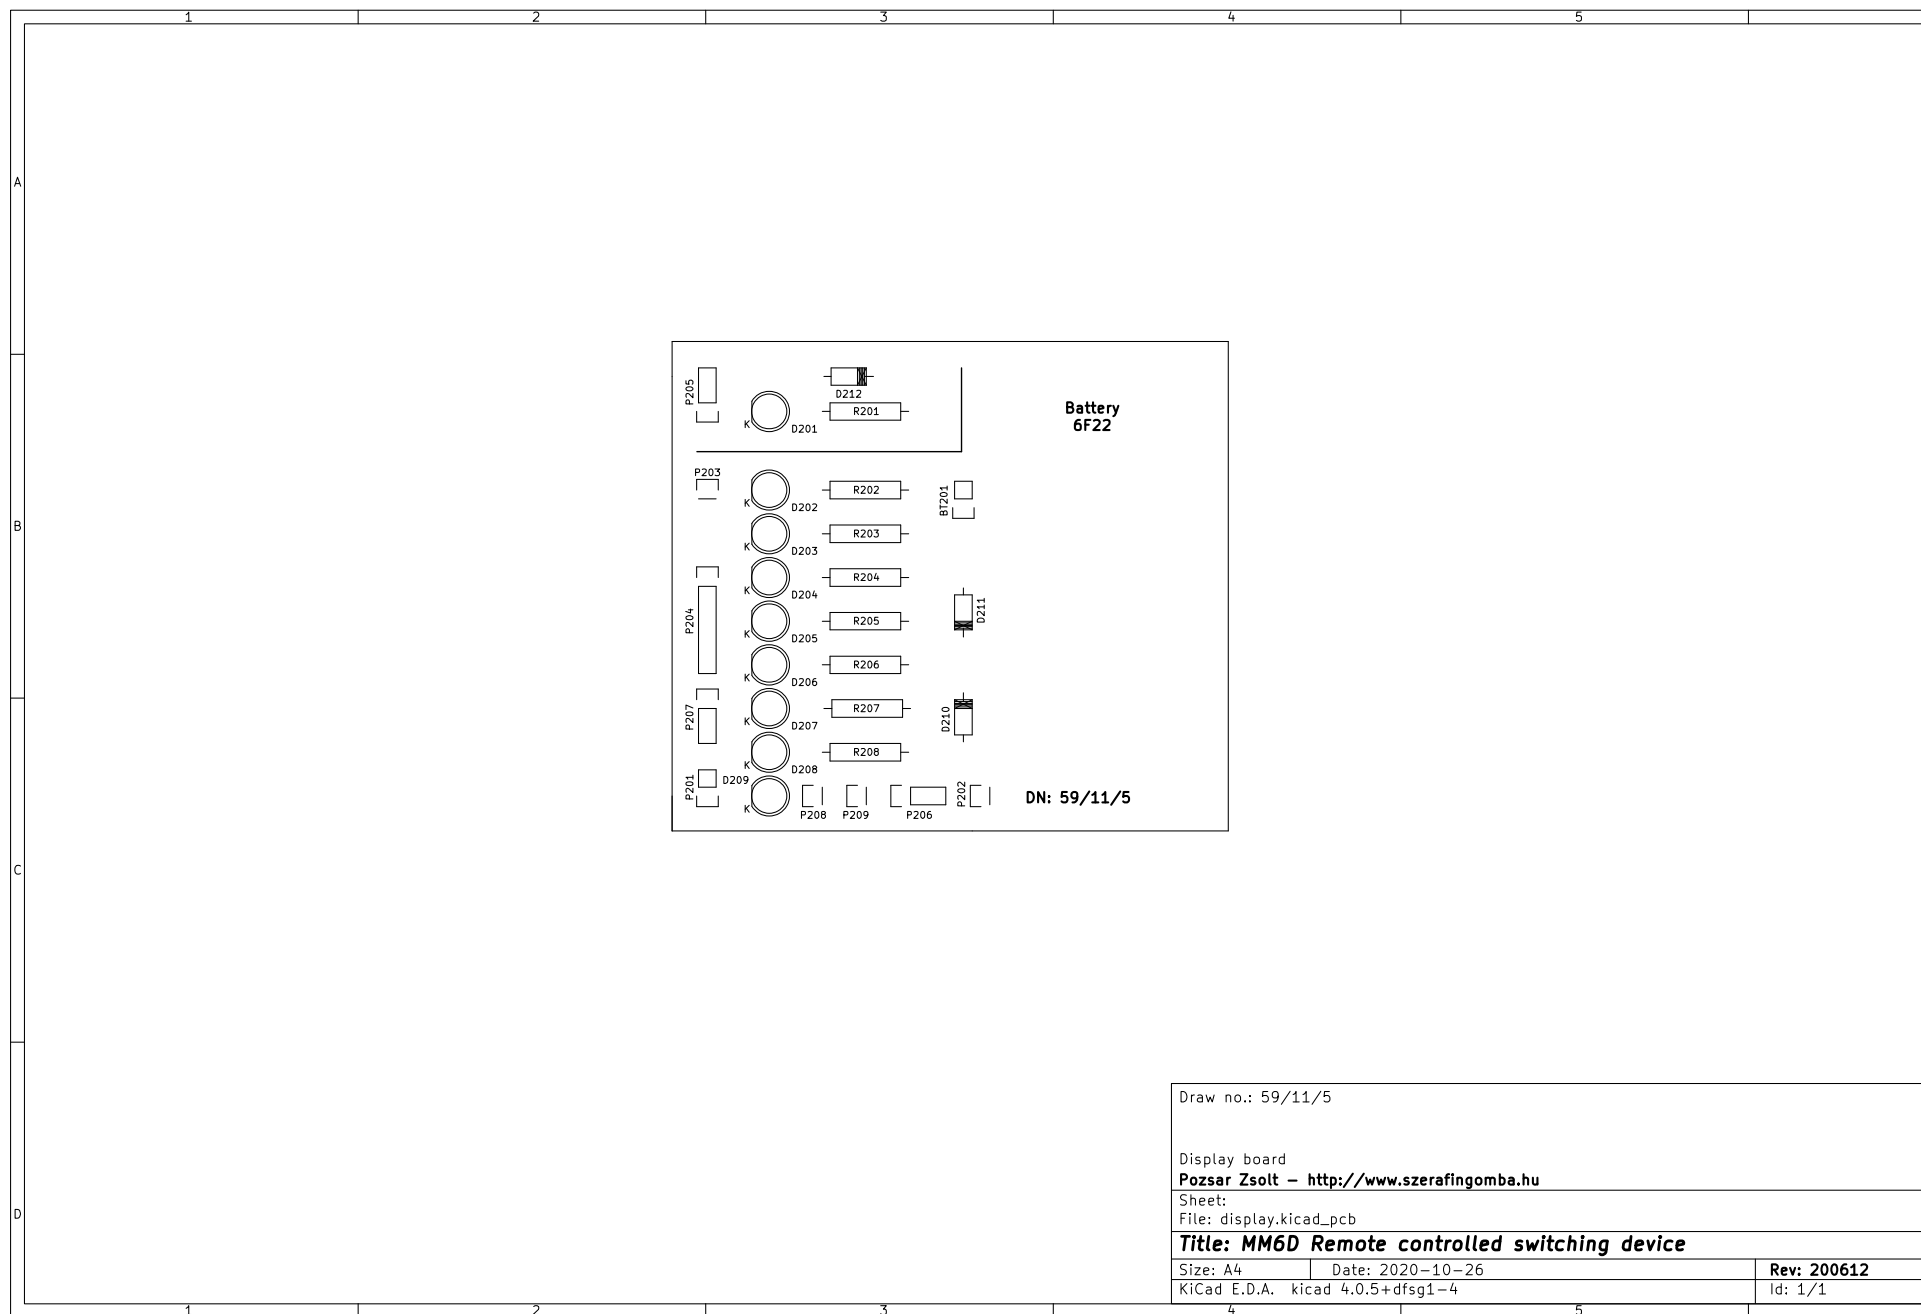


Annex 7: Silkscreen of display board

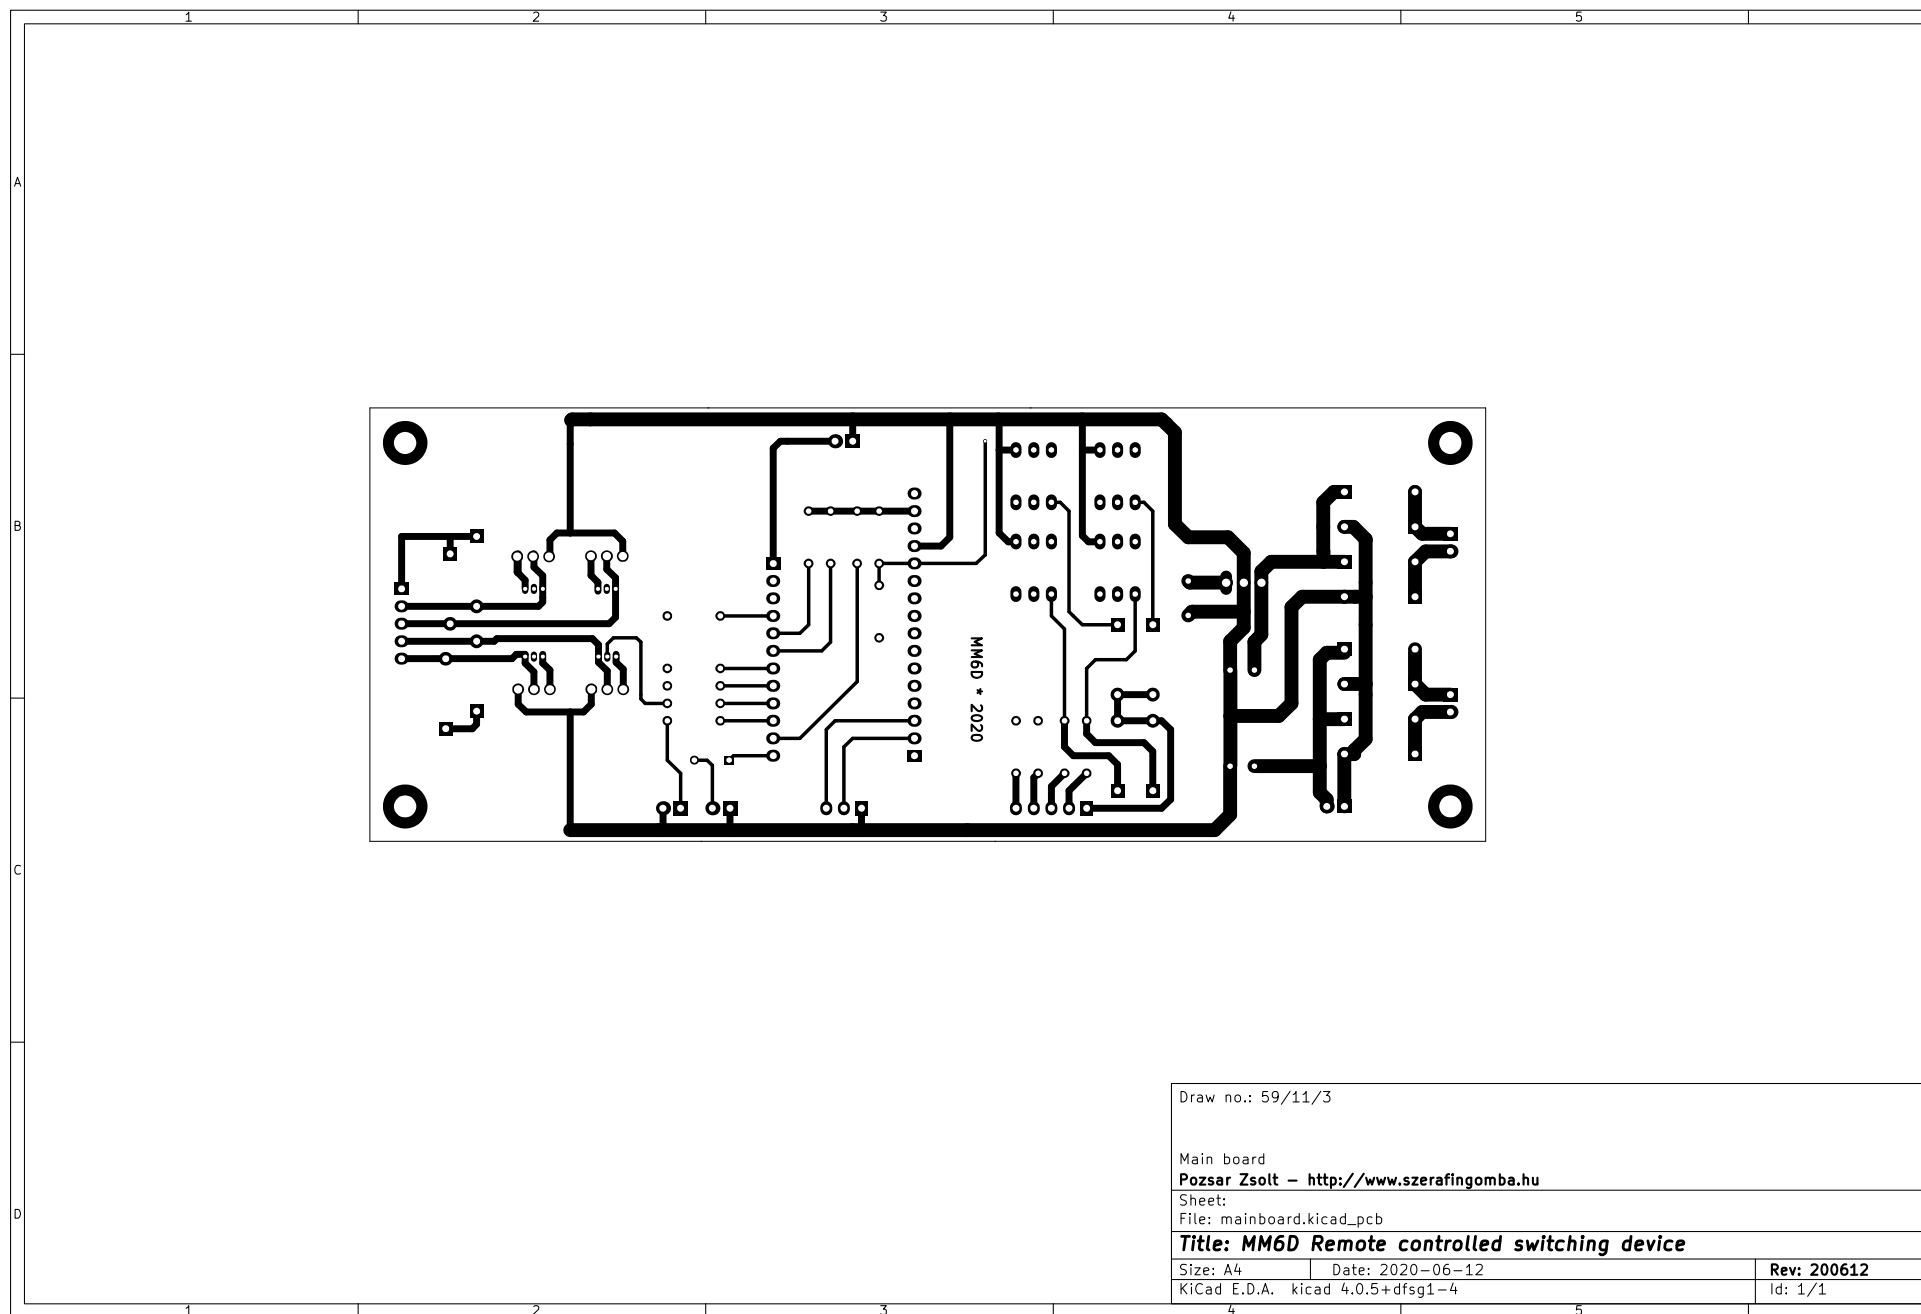

Annex 8: Solder side of main board

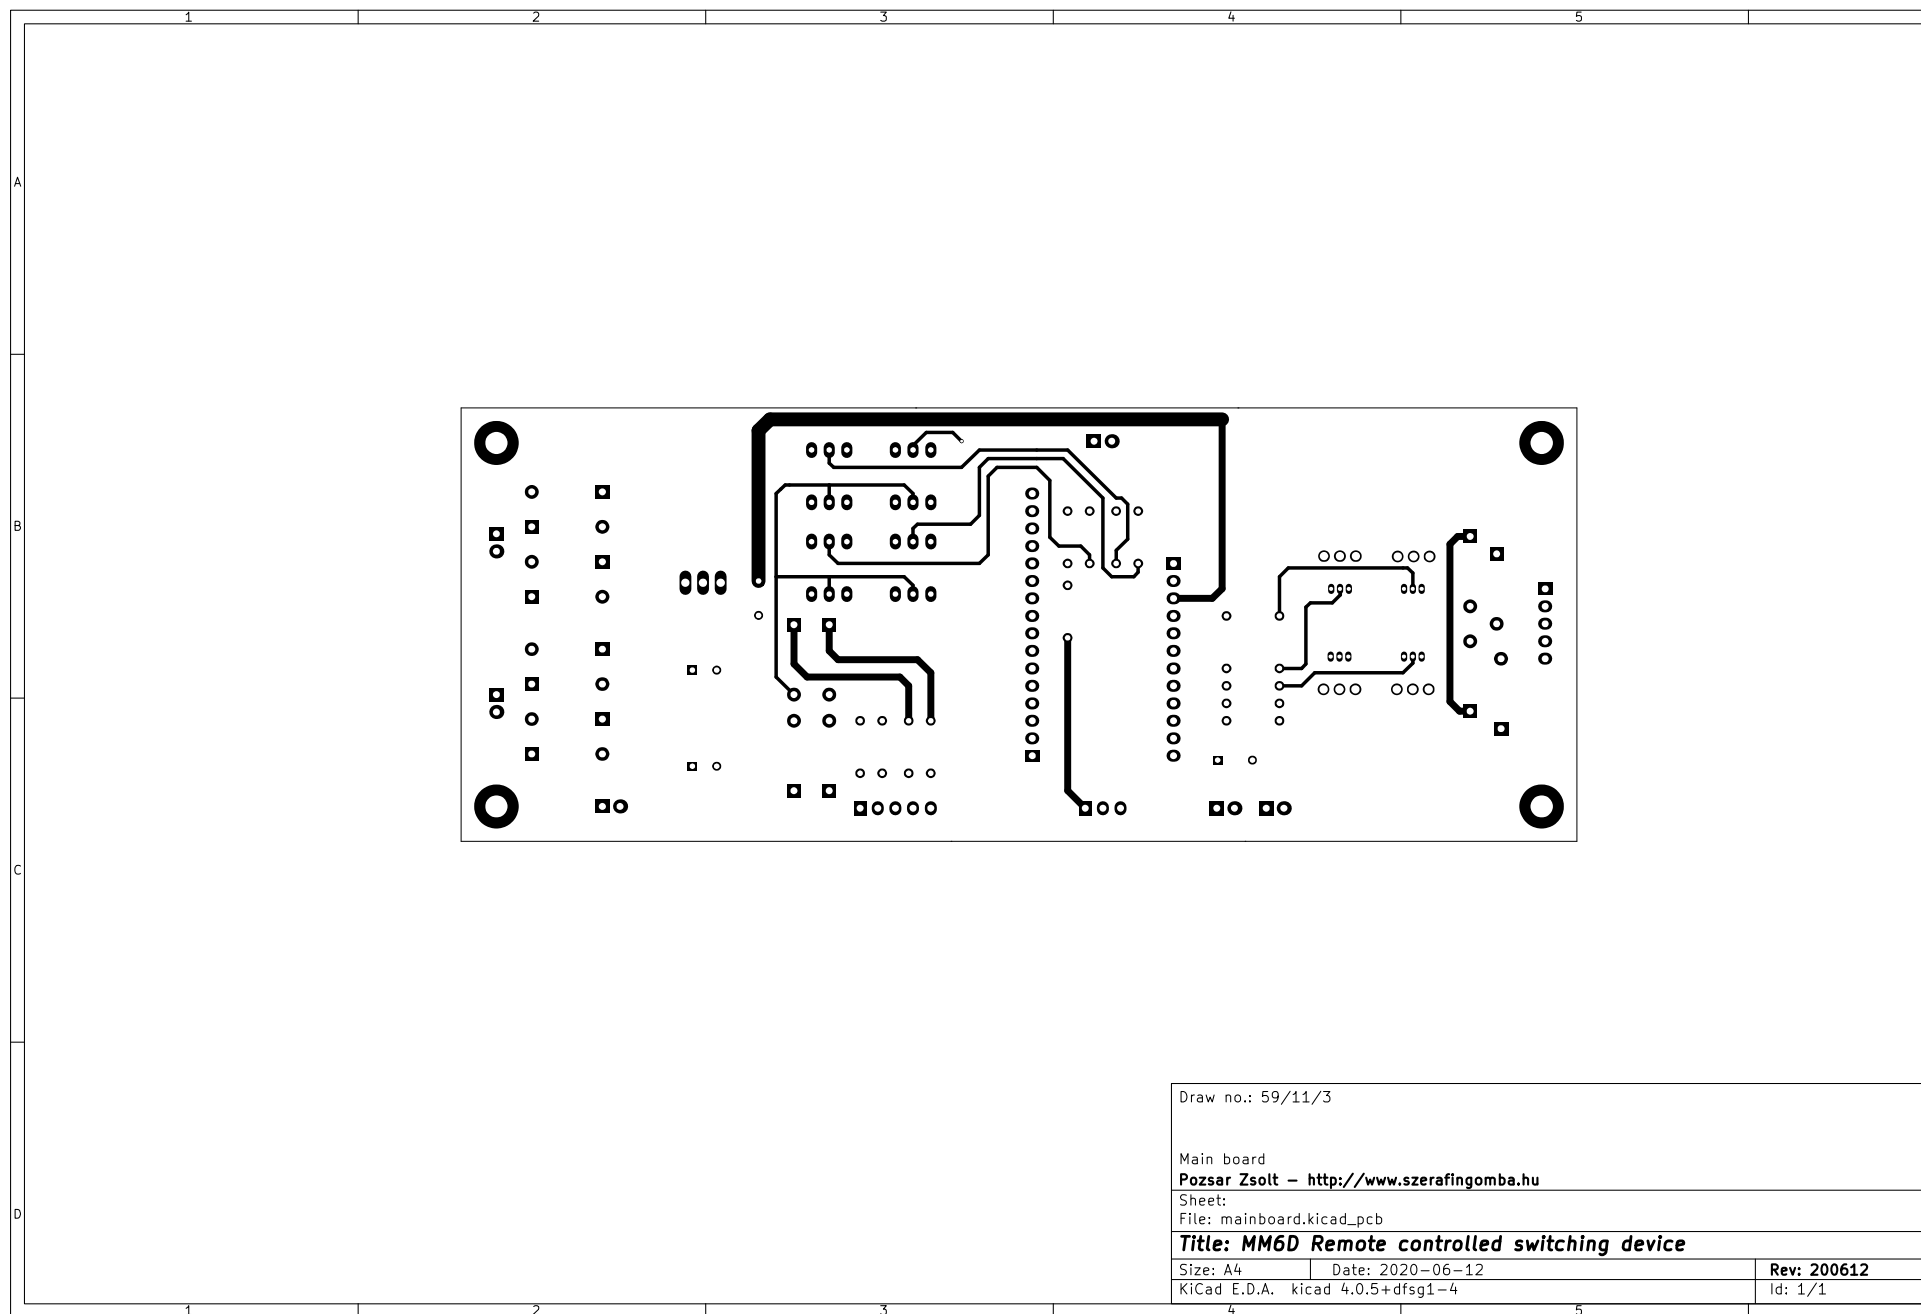

Annex 9: Component side of main board

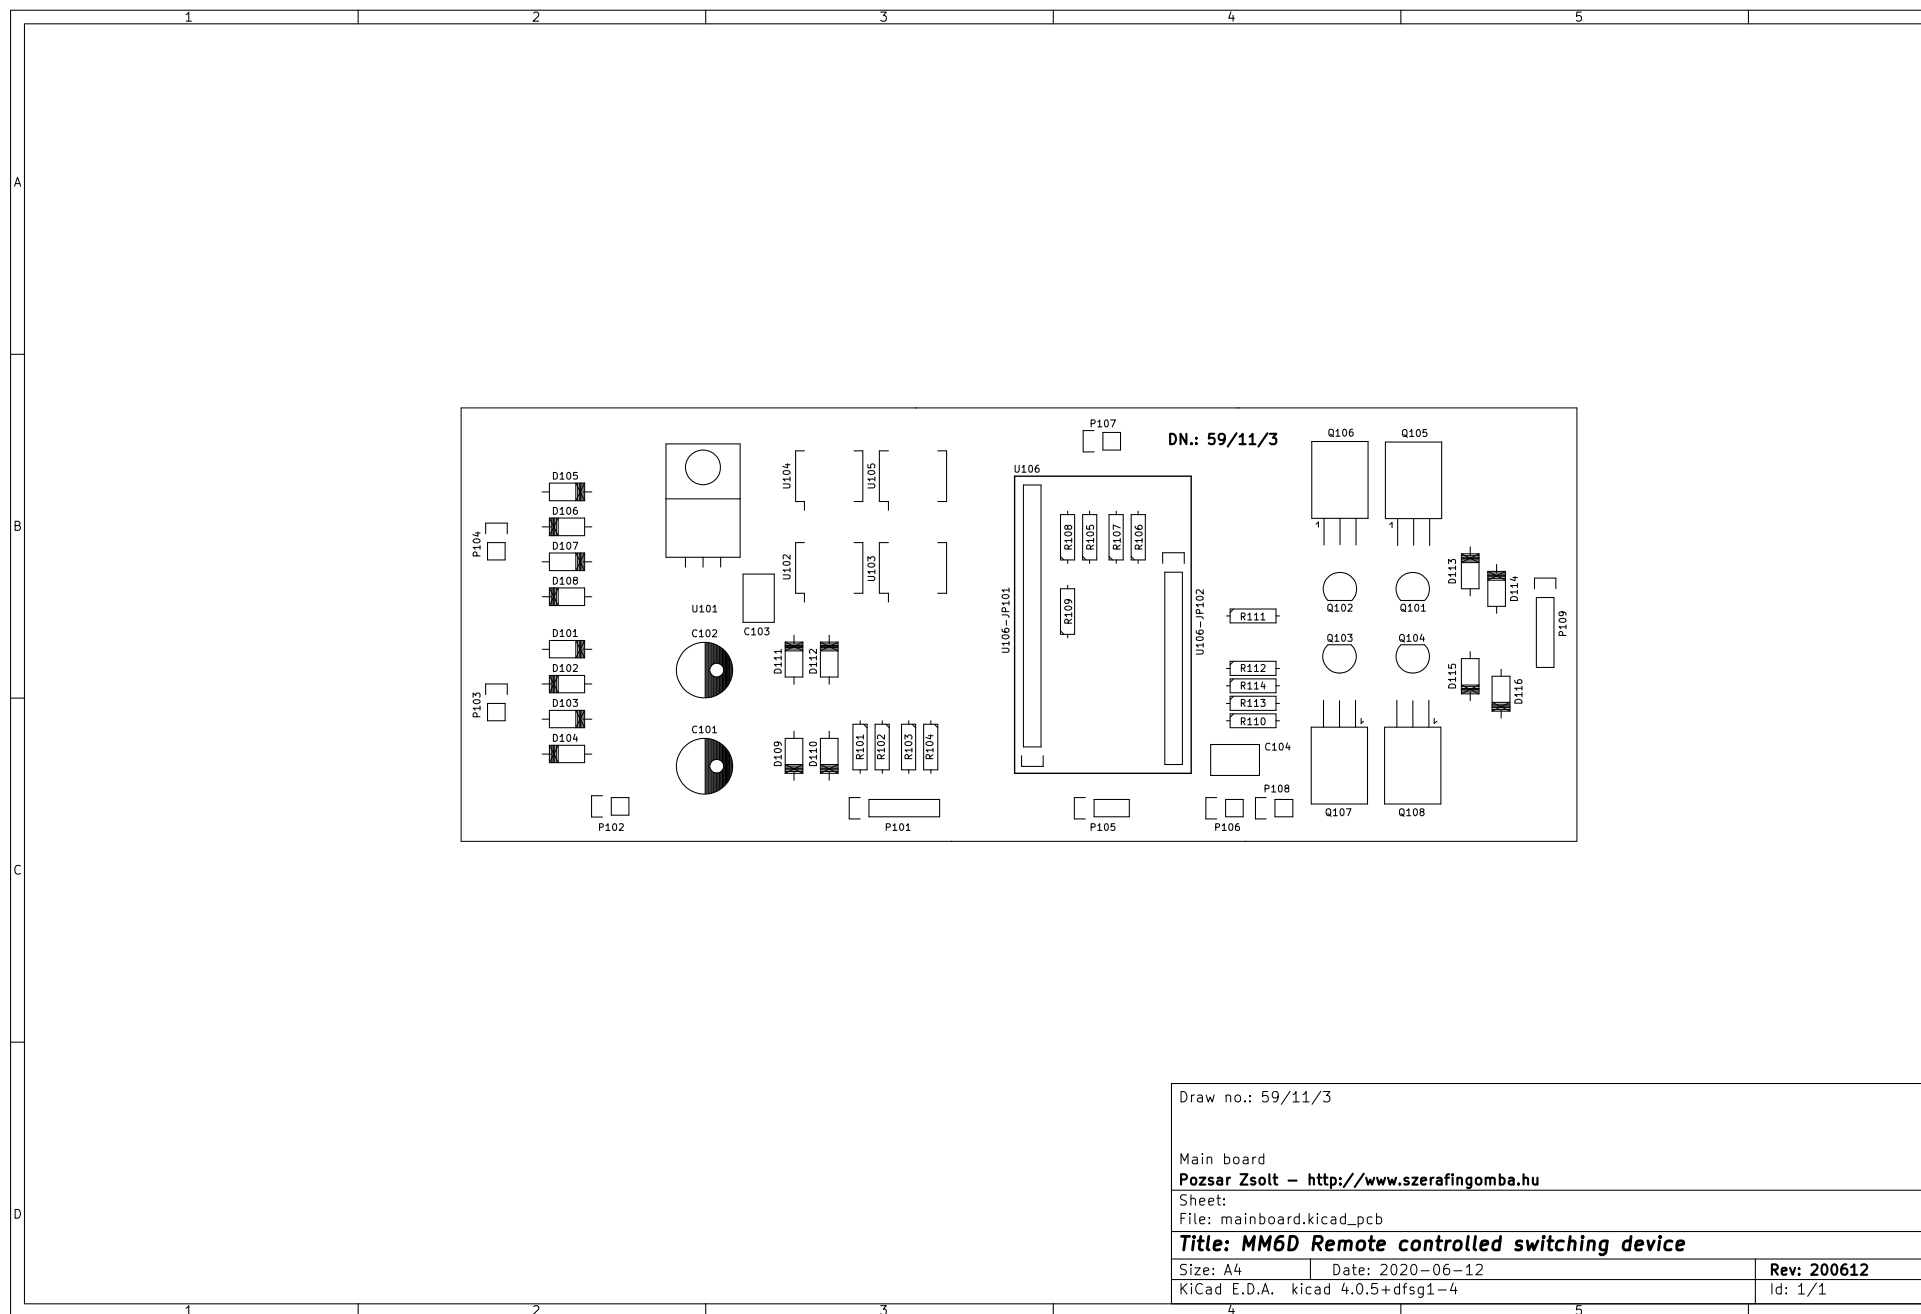

Annex 10: Silkscreen of main board